

GSM/GPRS/GPS Tracker

GL300

Interface Protocol

Revision: 1.00

GL300 @Tracker Air Interface Protocol

Document Title	GL300 Interface Protocol
Version	1.00
Date	2012-10-26
Status	Release
Document Control ID	TRACGL300AN001

Contents

Contents.....	2
Table Index	4
Figure Index.....	5
1. Revision history	6
2. Overview.....	7
2.1. Scope	7
2.2. Terms and Abbreviations.....	7
3. System Architecture.....	8
4. Message Description.....	9
4.1. Message Format.....	9
4.2. Command and Acknowledgement	11
4.2.1. Quick Start Setting.....	11
4.2.2. Bearer Setting Information.....	14
4.2.3. Backend Server Register Information	15
4.2.4. Global Configuration.....	16
4.2.5. Non movement detection.....	19
4.2.6. Time Adjustment.....	21
4.2.7. Fixed Report Information	22
4.2.8. Geo-Fence Information.....	25
4.2.9. Speed Alarm	27
4.2.10. Function Key Setting	28
4.2.11. Real Time Operation.....	30
4.2.12. White Call List Configuration.....	31
4.2.13. Google link SMS configuration	33
4.2.14. Auto unlock SIM-PIN.....	34
4.2.15. Digital Input Port Settings	35
4.2.16. Protocol watchdog.....	36
4.2.17. Data transfer between UART and backend server.....	37
4.2.18. Network Select	38
4.2.19. Outside Working Hours.....	39
4.2.20. Voice Monitoring.....	41
4.2.21. Temperature Alarm	42
4.3. Report	44
4.3.1. Position Related Report.....	44
4.3.2. Device Information Report.....	48
4.3.3. Report for Querying	50
4.3.4. Event Report.....	61
4.3.5. Buffer Report.....	73
4.3.6. Report Google Maps hyperlink	74
4.4. Heartbeat	74
4.5. Sever Acknowledgement	75

GL300 @Tracker Air Interface Protocol

Appendix: Message Index	76
-------------------------------	----

Table Index

TABLE 1: TERMS AND ABBREVIATIONS	7
--	---

Figure Index

FIGURE 1: SYSTEM ARCHITECTURE	8
FIGURE 2: @TRACKER PROTOCOL MESSAGES FLOW	9

1. Revision history

Revision	Date	Description of change
0.02	2012-10-12	Initial
1.00	2012-10-26	1. Add a new parameter to control whether to drive the motor in the command “AT+GTFKS”
	2012-11-12	2. Add a new command “AT+GTMON”
	2012-11-14	3.Delete the command “AT+GTFFC” protocol
	2012-11-16	4.Modified the command “AT+GTRTO” protocol
	2012-11-19	5.Modified the command “AT+GTOWH” protocol
	2012-11-20	6.Delete the report massage “+RESP:GTANT”
	2012-11-26	7.Add the report massage “+RESP:GTALS”
	2012-11-28	8.Add 4 reserved parameter in the command “AT+GTOWH”
	2012-11-29	9.Modified the parameter <log enable> is reserved in the commands “AT+GTQSS 、 AT+GTBSI”
	2012-12-04	10.Modified the report massage “+RESP:GTDOG”
	2012-12-15	11.Modified the description of NOTE in the command “AT+GTFRI”
	2013-1-5	12.Add the report massage “+RESP:GTDAT”
	2013-1-9	13.Add a parameter <GSM Interval> in the command “AT+GTNTS”
	2013-1-15	14.Modified the report massage “+RESP: GTALL”
		15.Modified the report massage “+RESP:GTDOG”
		16.Modified the decription of the parameter<Power key ind> in command “AT+GTFKS”
		17.Add the report massage “+RESP:GTMON”
		18.Add the temperature alarm report function AT+GTTEM and the alarm report massage +RESP:GTTEM
		19.Add a parameter <temperature> in the report massage +RESP:GTINF
		20.Modified the report massage “+RESP:GTMON”

2. Overview

2.1.Scope

The Interface Protocol is a digital communication interface based on printable ASCII characters over SMS or GPRS which is used for all communication between the backend server and the terminal. The backend server sends a command to the terminal and then the terminal confirms with an acknowledgement message. If necessary, the terminal also sends report messages to the backend server.

The purpose of this document is to describe how to build up the backend server based on the Interface Protocol.

2.2.Terms and Abbreviations

Table 1: Terms and abbreviations

Abbreviation	Description
APN	Access Point Network
ASCII	American National Standard Code for Information Interchange
GPRS	General Packet Radio Service
GSM	Global System for Mobile Communications
HDOP	Horizontal Dilution of Precision
ICCID	Integrated Circuit Card Identity
IP	Internet Protocol
SMS	Short Message Service
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
UTC	Coordinated Universal Time

3. System Architecture

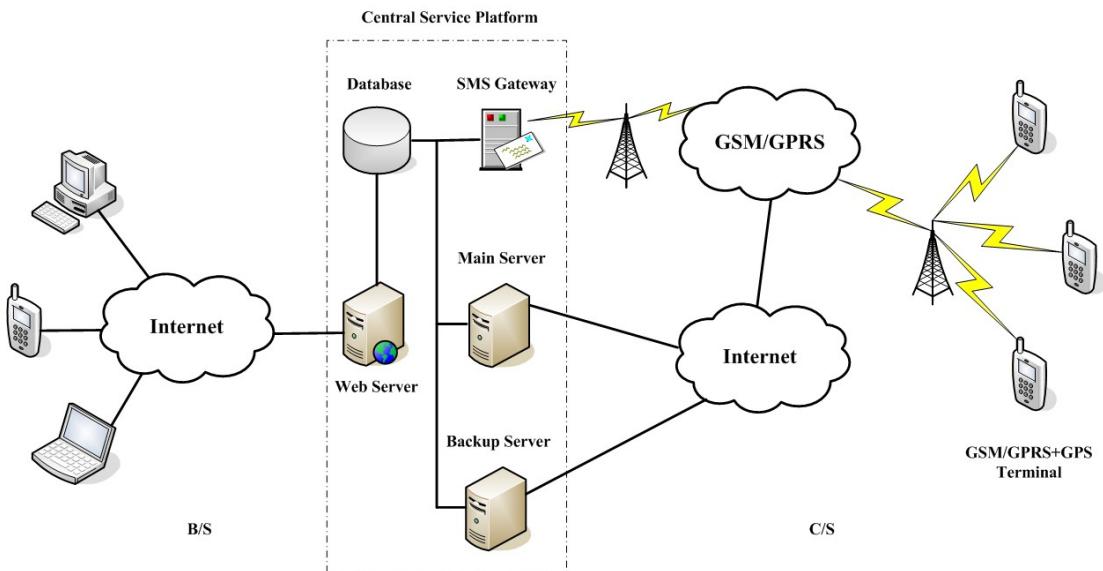


Figure 1: System architecture

The backend server can be accessed by many terminals and should have the following abilities:

- ✧ The backend server should be able to access the internet and listen to the connection originating from the terminal.
- ✧ The backend server should be able to support a TCP or UDP connection with the terminal. It should be able to receive data from the terminal and send data to the terminal.
- ✧ The backend server should be able to receive and send SMS.

4. Message Description

4.1. Message Format

All of the Interface Protocol messages are composed of printable ASCII characters. Each message has the following format:

Message format	Message type
AT+GTXXX=<parameter1>,<parameter2>,...\$	Command
+ACK:GTXXX,<parameter1>,<parameter2>,...\$	Acknowledgement
+RESP:GTXXX,<parameter1>,<parameter2>,...\$	Report

The entire message string ends with character ‘\$’.

The characters ‘XXX’ identify the different message.

The “<parameter1>,<parameter2>,...” carry the message’s parameters. The number of parameters is different in different messages. The ASCII character ‘,’ is used to separate the neighbouring parameter characters. The parameter string may contain the ASCII characters: ‘0’-‘9’, ‘a’-‘z’, ‘A’-‘Z’.

Detailed descriptions of each message format are located in the specific message sections.

By sending Commands to the terminal, the backend server can either configure and query the parameters of the terminal or control the terminal to perform specific actions. When the terminal receives Commands over the air, it will reply with a corresponding Acknowledgement message. According to the configuration of the parameters, the terminal can send Report messages to the backend server. Please see the following figure:

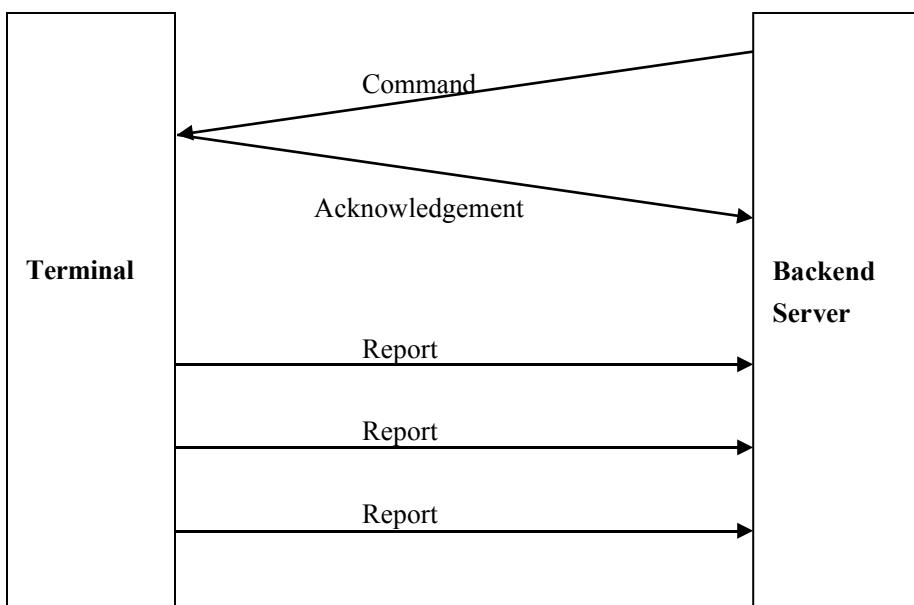


Figure 2: @Tracker protocol messages flow

When the device receives commands over the air, it supports several commands in one SMS or GPRS packet without separate symbol between two close commands. But it is necessary to make sure the total size of the several commands is not longer than 160 if the commands are sent via SMS. Here is an example to send three commands in one SMS.

```
AT+GTFRI=gl300,1,1,,0000,2359,60,60,,1F,0,,,,,,0007$AT+GTGEO=gl300,0,3,101.412248,  
21.187891,1000,600,,,,0008$AT+GTSPD=gl300,1,5,40,30,60,,,,0009$
```

It includes three commands (**AT+GTFRI**, **AT+GTGEO** and **AT+GTSPD**) in the above message. And the terminal will handle the three commands one by one after it received the message via SMS and it will report the following three acknowledgement message to the backend server one by one.

```
+ACK:GTFRI,1A0100,135790246811220,,0007,20100310172830,11F0$
```

```
+ACK:GTGEO,1A0100,135790246811220,,0,0008,20100310172900,11F1$
```

```
+ACK:GTSPD,1A0100,135790246811220,,0009,20100310172930,11F2$
```

4.2. Command and Acknowledgement

4.2.1. Quick Start Setting

The command **AT+GTQSS** is used to set the GPRS parameter and backend server information in one command if all these settings are within 160 bytes, otherwise use **AT+GTBSI** and **AT+GTSRI** in two steps.

➤ **AT+GTQSS=**

Example:

```
AT+GTQSS=gl300,cmnet,,,4,,116.226.44.17,9001,116.226.44.16,9002,+8613812341234,0,1,  
,,0001$
```

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	gl300
APN	<=40		
APN user name	<=30		
APN password	<=30		
Report mode	1	0 – 5	0
Reserved	0		
Buffer enable	1	0 1 2	1
Main server IP/domain name	<=60		
Main server port	<=5	0 – 65535	0
Backup server IP	<=15		0.0.0.0
Backup server port	<=5	0 – 65535	0
SMS gateway	<=20		
Heartbeat interval	<=3	0 5 – 360min	0
SACK enable	1	0 1	0
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Password>: The valid character of password is ‘0’-‘9’, ‘a’-‘z’, ‘A’-‘Z’. The default value is “gl300”.
- ✧ <APN>: Access point name (APN).
- ✧ <APN user name>: the GPRS APN user name. If the parameter field is empty, the parameter will be cleared.
- ✧ <APN password>: the GPRS APN password. If the parameter field is empty, the parameter will be cleared.
- ✧ <Report mode>: Supports report modes as following:
 - 0: Stop reporting.
 - 1: TCP short-connect preferred mode. The connection is based on TCP protocol. The

terminal connects to the backend server every time it needs to send data and will shut down the connection when the terminal finishes sending data. And if it is failed to establish a TCP connection with the backend server (including Main Server and Backup Server), it will try to send data via SMS.

- 2: TCP short-connect forced mode. The connection is based on TCP protocol. The terminal connects to the backend server every time it needs to send data and will shut down the connection when the terminal finishes sending data. And if it is failed to establish a TCP connection with the backend server (including Main Server and Backup Server), it will be stored in the BUFFER (if BUFFER function is enabled, please refer to <Buffer enable>) or discarded (if the BUFFER function is disabled).
 - 3: TCP long-connect mode. The connection is based on TCP protocol. The terminal connects to the backend server and maintains the connection using the heart beat data. Please note that in this mode the backend server should respond to the heart beat data from the terminals.
5. UDP mode. The terminal will send data to the backend server by UDP protocol. It supports to receive protocol command via UDP. But it is recommended to make sure the IP address and UDP port of the device can be visited in the internet, and this is generally realized by heart beat package and the message **+RESP:GTPDP**.
- 5: Force on SMS. Only use the SMS for transmitting.
- ❖ <*Reserved*>: Not used at present. Please keep empty
 - ❖ <*Buffer enable*>: Enable or disable BUFFER function. Please refer to 3.3.5 for the details about BUFFER function.
 - 0 Disable the BUFFER function.
 - 1 Enable the BUFFER function.
 - 2 High priority. Enable the buffer report function. Under this working mode, the device will send all the buffered messages before sending any normal message except for the SOS message (**+RESP:GTSOS**).
 - ❖ <*Main server IP/domain name*>: The IP address or the domain name of the main server.
 - ❖ <*Main server port*>: The port of the main server.
 - ❖ <*Backup server IP*>: The IP address of the backup backend server.
 - ❖ <*Backup server port*>: The port of the backup server.
 - ❖ <*SMS gateway*>: Maximum 20 characters including the optional national code starting with “+” for SMS messages. Short code (for example: 10086) is also supported.
 - ❖ <*Heartbeat interval*>: the interval for the terminal to send heartbeat package message to the backend server. If set to 0, no heartbeat package is sent.
 - ❖ <*SACK enable*>: A numeric to indicate whether the backend server should reply SACK message to the device.
 - 0: the backend server does not reply SACK message after receiving a message from the device.
 - 1: the backend server should reply SACK message after receiving a message from the device.
 - ❖ <*Serial number*>: the serial number for the command. It will be invoked in the ACK message of the command.
 - ❖ <*Tail character*>: a character to indicate the end of the command. And it should be “\$”.

Note:

If *<Report mode>* is set as 4 (UDP mode), it is strongly recommended to enable SACK or heart beat mechanism (*<Heartbeat interval>* doesn't equal to 0).

The acknowledgement message of AT+GTQSS command:

➤ +ACK:GTQSS,

Example:

+ACK:GTQSS,1A0100,135790246811220,,0001,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ *<Protocol version>*: The combination of the device type and the version number of the applied protocol. The first two characters ‘XX’ indicate the device type. ‘1A’ represents GL300. The middle two characters are the main version number and the last two characters are the minimum version number. Both the main version and the minimum version are hex digital. For example, ‘020A’ means version 2.10.
- ❖ *<Unique ID>*: ID of the device, use the IMEI of the current SIM card inside the terminal.
- ❖ *<Device name>*: Please refer to the parameter *<Device name>* in the command **AT+GTCFG**.
- ❖ *<Serial number>*: The same serial number which is sent to the device with the corresponding command. The backend server could use it to distinguish which command the ACK message is for.
- ❖ *<Send time>*: The local time to send the ACK message.
- ❖ *<Count number>*: The self-increasing count number will be put into every acknowledgment message and report message. The count is beginning from 0000 and increases by 1 every time. It will roll back after “FFFF”.

4.2.2. Bearer Setting Information

The command **AT+GTBSI** is used to set the GPRS parameter.

➤ **AT+GTBSI=**

Example:

AT+GTBSI=gl300,cmnet,,,,,,0002\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	gl300
APN	<=40		
APN user name	<=30		
APN password	<=30		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

The acknowledgement message of **AT+GTBSI** command:

➤ **+ACK:GTBSI,**

Example:

+ACK:GTBSI,1A0100,135790246811220,,0002,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.3. Backend Server Register Information

The command **AT+GTSRI** is used to configure the backend server information that the terminal reports to and the report mode that defines the communication method between the backend server and the terminal.

➤ **AT+GTSRI=**

Example:

AT+GTSRI=gl300,4,,,116.226.44.17,9001,116.226.44.16,9002,+8613812341234,0,1,,,0003\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	gl300
Report mode	1	0 – 5	0
Reserved	0		
Buffer enable	1	0 1 2	1
Main server IP/domain name	<=60		
Main server port	<=5	0 – 65535	0
Backup server IP	<=15		0.0.0.0
Backup server port	<=5	0 – 65535	0
SMS gateway	<=20		
Heartbeat interval	<=3	0 5 – 360min	0
SACK enable	1	0 1	0
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

The acknowledgement message of **AT+GTSRI** command:

➤ **+ACK:GTSRI,**

Example:

+ACK:GTSRI,1A0100,135790246811220,,0003,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.4. Global Configuration

The AT+GTCFG command is used to configure the global parameters.

➤ AT+GTCFG=

Example:

AT+GTCFG=quectl,123456,,,,,,,,,,0004\$

AT+GTCFG=gl300,,GL300,0,0.0,0,7,0,0,,,1,1,300,1,0,20491231235959,1,0,,0004\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	gl300
New password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	
Device name	20	'0' – '9', 'a' – 'z', 'A' – 'Z', '–', '–', '_'	GL300
ODO enable	1	0 1	0
ODO mileage	<=9	0.0 – 4294967.0Km	0.0
GPS on need	1	0 1 2 3	1
GPS fix delay	2	5 – 60sec	5
Report items mask	<=4	0000 – 007F	001F
Gsm report	1	0 1 2 3	0
Reserved	0		
Event mask	4	0000-3FFF	0FFF
EPB mode	1	0 1	0
LED on	1	0 1 2	1
Info report enable	1	0 1	1
Info report interval	<=5	30 – 86400sec	300
Location by call	1	0 1	1
Expiry enable	1	0 1	0
Expiry time	14	YYYYMMDDHHMMSS	204912312 35959
Agps mode	1	0 1	0
Sleep enable	1	0 1	0
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <*New password*>: Set to change the current password.
- ✧ <*Device name*>: the name of the device, which appears in each uplink message.
- ✧ <*ODO enable*>: Enable or disable the odograph function to calculate the total mileage. The current mileage is included in the message GTINF.
 - 0: Disable the ODO mileage function.
 - 1: Enable the ODO mileage function.
- ✧ <*ODO mileage*>: The value of the current total mileage.

GL300 @Tracker Air Interface Protocol

- ✧ <*GPS on need*>: Whether to close GPS chip after retrieving GPS position information.
 - 0: Never close GPS chip
 - 1: Close GPS chip after retrieving GPS information every time.
 - 2: Never close GPS chip only in ignition on state or movement state.
 - 3: Never open GPS chip.
- ✧ <*GPS fix delay*>: This is the time to wait after GPS fixing succeed. After GPS fixing succeed, the device will wait for a period of time (defined by <*GPS fix delay*>) and then get the result of GPS fixing because maybe it is not accurate to get the position immediately after GPS fixing succeed. (e.g. if <*GPS fix delay*> is set as 7, we will wait for 7 seconds after GPS fixing succeed and then get the position as the result). The range of the parameter is 5 – 60, and the default value is 5. Unit: second.
- ✧ <*Report items mask*>: Bitwise report mask to configure the composition of all the uplink message. Each bit represents a field in the uplink message. If some bit is set as 1, the corresponding field will be filled if it is included in the uplink message. Otherwise, the field will be empty.
 - Bit0(0001): <*speed*>
 - Bit1(0002): <*azimuth*>
 - Bit2(0004): <*altitude*>
 - Bit3(0008): GSM LAI and CI, including <*mcc*>, <*mnc*>, <*lac*>, <*cellid*>
 - Bit4(0010): <*send time*>
 - Bit5(0020): <*Device name*>
- ✧ <*Event mask*>: A Hex value to configure which event reports can be sent to the backend server: Each bit corresponds to a report message. And if the bit is set as 1, the corresponding report message can be sent to the backend server. Otherwise, it can not be sent to the backend server. Here is the mapping between each bit and each report message.
 - bit0(0001): +RESP:GTPNA
 - bit1(0002): +RESP:GTPFA
 - bit2(0004): +RESP:GTEPN
 - bit3(0008): +RESP:GTEPF
 - bit4(0010): Reserved
 - bit5(0020): +RESP:GTBPL
 - bit6(0040): +RESP:GBTBC
 - bit7(0080): +RESP:GTSTC
 - bit8(0100): +RESP:GTSTT
 - bit9(0200): Reserved
 - bit10(0400): +RESP:GTPDP
 - bit11(0800): +RESP:GTPNL
 - bit12(1000): +RESP:GTIGN and +RESP:GTIGF
 - bit13(2000): +RESP:GTIGL
- ✧ <*Gsm report*>: If GPS fixing for the report message +RESP:GTSOS, +RESP:GTRTL, +RESP:GTLBC and +RESP:GTFRI were failed and the parameter <*Gsm report*> was set as 1, the terminal reports the message +RESP:GTGSM, including the information of the service cell and the neighbour cells after those messages.
 - 0: Not allow the cells' information report after failed to get GPS position.

GL300 @Tracker Air Interface Protocol

- 1: Allow the cells' information report after failed to get GPS position.
- 2: Do not report the message **+RESP:GTGSM** if no cell's information is found.
- 3: Allow the cells' information report whatever it gets GPS position or not
- ✧ <*EPB mode*>: The mode of External Power Control Unit With Built-in Motion Sensor.
 - 0: disable External Power Control Unit With Built-in Motion Sensor.
 - 1: enable External Power Control Unit With Built-in Motion Sensor.
- ✧ <*LED on*>: Configure the working mode of LEDs.
 - 0: Each time after the device powers on or the parameter is updated to 0 from other values, GPS LED will work for 150 seconds and then turn off deadly. GSM LED and Power LED work normally.
 - 1: All LEDs work normally.
 - 2: All LEDs are off always except the following cases. The first exception is all LEDs will work for a period time after power on. The second exception is Power LED will flash fast during power off procedure. The third exception is Power LED will work normally for charging status when a charger is inserted in power off state.
- ✧ <*Info report enable*>: Enable/disable the device information report (**+RESP:GTINF**) function. The device information include state of the device, ICCID, GSM signal strength, adapter connection status, battery voltage, charging status, Power and GPS LED working mode, GPS on need setting, GPS antenna type, GPS antenna status, the last known time of GPS fix.
 - 0: Disable the device information report function.
 - 1: Enable the device information report function.
- ✧ <*Info report interval*>: The interval of reporting the device information.
- ✧ <*Location by call*>: Configure how to handle the incoming call.
 - 0: Just hang up the call.
 - 1: Hang up the call and report the current position.
- ✧ <*Expiry enable*>: Enable or disable the expiry function to stop all the GPS fixing and any reports.
 - 0: Disable the Expiry function.
 - 1: Enable the Expiry function.
- ✧ <*Expiry time*>: The time when to stop all the GPS fixing and any reports. The valid format is “YYYYMMDDHHMMSS”. The value range of “YYYY” is “2000”-“3000”. The value range of “MM” is “01”-“12”. The value range of “DD” is “00”-“31”. The value range of “HH” is “00”-“23”. The value range of “MM” is “00”-“59”. The value range of “SS” is “00”-“59”. It is noticed to use RTC time here.
- ✧ <*Agps mode*>: A numeric to indicate whether to enable AGPS. AGPS is helpful to improve the ratio to get GPS position successfully and reduce the time to get GPS position.
 - 0: Disable the AGPS function.
 - 1: Enable the AGPS function.
- ✧ <*Sleep enable*>: Enable or disable the sleep mode when charging.
 - 0: Disable the sleep mode when charging.
 - 1: Do not disable the sleep mode when charging.

Note:

For AGPS function, it is necessary to download AGPS file from the specified URL, so it is

GL300 @Tracker Air Interface Protocol

unavoidable to cost some data traffic for the AGPS function. At present, it takes about 10 KB data traffic for the AGPS function each day.

The acknowledgement message of **AT+GTCFG** command:

➤ +ACK:GTCFG,

Example:

+ACK:GTCFG,1A0100,135790246811220,,0004,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.5. Non movement detection

The **AT+GTNMD** command is used to configure the parameters for non movement detection.

➤ AT+GTNMD=

Example:

AT+GTNMD=gl300,,3,2,3,,,,,,0005\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	gl300
mode	1	0-F	0
Non-movement duration	<=3	1 – 255(×15sec)	2
Movement duration	<=2	1 – 50(×128ms)	3
Movement threshold	1	2 – 9	2
rest fix interval	5	5 – 86400sec	300
rest send interval	5	5 – 86400sec	300
pm rest threshold	1	2 – 9	2
pm motion threshold	1	2 – 9	3
Urc report	1	0 1	0
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ <mode>: A hex numeric to determine how the function works. Each bit of the hex numeric indicate different behavior that device could do. If the corresponding bit is 1, the device will behave as the description. Otherwise, it won't behave as the description.
 - Bit0(1): Suspend the report of FRI(including +RESP:GTGSM for FRI) and Geo-Fence when it detects non-movement.
 - Bit1(2): Report the message +RESP:GTNMR to the backend server when it detects non-movement.
 - Bit2(4): Report the message +RESP:GTNMR to the backend server when it detects movement.
 - Bit3(8): Change the fix interval and send interval of FRI(including +RESP:GTGSM for FRI) to <rest fix interval> and <rest send interval> when it detects non-movement. In the case, it just modify the fix interval and send interval of FRI(including +RESP:GTGSM for FRI) but not suspend the report of FRI(including +RESP:GTGSM for FRI) even if Bit0 is 1.
- ❖ <Non-movement duration>: A time parameter to determine whether the device enters non-movement status, i.e. if the motion sensor detects that the device keeps in non-movement for a period of time defined by <Non-movement duration>, the device will be considered as in non-movement status.
- ❖ <Movement duration>: A time parameter to determine whether the device enters movement status. If the motion sensor detects that the device keeps in movement for a period of time defined by <Movement duration>, the device will be considered as in movement status.
- ❖ <Movement threshold>: The threshold for the motion sensor to determine whether the device is in movement. The less, the more likely to be treated as movement.
- ❖ <rest fix interval>: the fix interval for the report of FRI when the device is in rest state if Bit3 of <mode> is 1.
- ❖ <rest send interval>: the send interval for the report of FRI when the device is in rest state if Bit3 of <mode> is 1.
- ❖ <pm rest threshold>: The threshold for the EBK motion sensor to determine whether the EBK enters non-movement status.
- ❖ <pm motion threshold>: The threshold for the EBK motion sensor to determine whether the EBK enters movement status.
- ❖ <Urc report>: Enable or disable output sensor state through urc.
 - 0: Do not output the sensor's state to UART.
 - 1: Output a URC to UART to indicate state changing. “SENSOR:REST” means state changing from MOTION to REST. “SENSOR:MOTION” means state changing from REST to MOTION.

The acknowledgement message of AT+GTNMD command:

➤ +ACK:GTNMD,

Example:

+ACK:GTNMD,1A0100,135790246811220,,0005,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	

GL300 @Tracker Air Interface Protocol

Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.6. Time Adjustment

The command AT+GTTMA is used to adjust local time. If the GPS fixing is successful, the local time will be automatically adjusted according to the GPS UTC time.

➤ AT+GTTMA=

Example:

AT+GTTMA=gl300,-,3,30,0,20090917203500,0006\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	gl300
Sign	1	+ -	+
Hour Offset	<=2	0 - 23	00
Minute Offset	<=2	0 - 59	00
Daylight Saving	1	0 1	0
UTC Time	14	YYYYMMDDHHMMSS	
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Sign>: Indicate the positive or negative of the local time offset to UTC
- ✧ <Hour Offset>: UTC offset in hours
- ✧ <Minute Offset>: UTC offset in minutes
- ✧ <Daylight Saving>: Enable/disable daylight saving time.
0: Disable daylight saving
1: Enable daylight saving
- ✧ <UTC time>: The configuration UTC time.

The acknowledgement message of AT+GTTMA command:

➤ +ACK:GTTMA,

Example:

+ACK:GTTMA,1A0100,135790246811220,,0007,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default

GL300 @Tracker Air Interface Protocol

Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.7. Fixed Report Information

The command **AT+GTFRI** is used to configure the parameters of scheduled report.

➤ AT+GTFRI=

Example:

AT+GTFRI=gl300,0,,,,,,,,,,0007\$

AT+GTFRI=gl300,1,1,,0000,2359,60,60,,1F,,,,,,0007\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	gl300
Mode	1	0 1 2 3 4 5	0
Discard no fix	1	0 1	1
Reserved	0		
Reserved	0		
Begin time	4	HHMM	0000
End time	4	HHMM	0000
Check interval	<=5	5 – 86400sec	180
Send interval	<=5	5 – 86400sec	180
Ignition check interval	<=5	5 – 86400sec	180
Ignition send interval	<=5	5 – 86400sec	180
Report mask	<=4	0000 – 007F	001F
Distance	<=5	50 – 65535m	1000
Mileage	<=5	50 – 65535m	1000
movement detect mode	1	0 1	0
movement speed	<=3	1-999(km/h)	5
movement distance	<=4	1-9999(m)	50
Movement send number	1	1-5	5
corner	3	0 - 180	0
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Mode>:
 - 0: Disable fixed report function.
 - 1: Enable the scheduled timing report.
 - 2: Enable the scheduled distance report. Report each time the straight length that the device moved has exceeded the specified distance. It ignores the detail path the device has passed along. This function is invalid unless the GPS chip opens always. Unit: Meter.
 - 3: Enable the scheduled mileage report. Report each time the path length that the device moved has exceeded the specified length. It calculates the length of the detail path the device has passed along. This function is invalid unless the GPS chip opens always. Unit: Meter.
 - 4: Optimum Report. Simultaneously observe time interval and path length between two adjacent reports. Report device position if the calculated time interval per current time against the last report time is greater than the <Send Interval>, and the length of path between the current position and the last position is greater than the <Mileage> setting. There is a precondition for the function. It is that <GPS on need> must be 0 (Never close GPS chip) or 2 (Never close GPS chip in ignition on state or movement state).
 - 5: Enable the scheduled timing report for GSM.
- ✧ <*Discard no fix*>: 0 to report last known GPS position if there is no GPS fix, 1 to send nothing if there is no GPS fix.
- ✧ <*Begin time*>: The start time of scheduled fixed report. The valid format is “HHMM”. The value range of “HH” is “00”-“23”. The value range of “MM” is “00”-“59”. It is noticed to use system time here.
- ✧ <*End time*>: The end time of scheduled fixed report. The valid format and range are same as <*Begin time*>.
- ✧ <*Check interval*>: The interval time to fix GPS when the device attached vehicle is ignition off, its value range is 5-86400 and the unit is second.
- ✧ <*Send interval*>: The period to send the position information when the device attached vehicle is ignition off. The value range is 5-86400 and the unit is second.
- ✧ <*Ignition check interval*>: The interval time to fix GPS when the device attached vehicle is ignition on, its value range is 5-86400 and the unit is second.
- ✧ <*Ignition send interval*>: The period to send the position information when the device attached vehicle is ignition on. The value range is 5-86400 and the unit is second.
- ✧ <*Report mask*>: Bitwise report mask to configure the composition of GPS position information for fixed report. If some bit is set as 1, the corresponding field will be filled in the position related message. Otherwise, the field will be empty.
 - Bit0(0001): <*speed*>
 - Bit1(0002): <*azimuth*>
 - Bit2(0004): <*altitude*>
 - Bit3(0008): GSM LAI and CI, including <*mcc*>, <*mnc*>, <*lac*>, <*cellid*>
 - Bit4(0010): <*send time*>
- ✧ <*Distance*>: the specified distance to send the position information when <Mode> is 2 and this is valid only in the case that GPS chip keep opened always. Unit: meter.
- ✧ <*Mileage*>: the specified path length to send the position information when <Mode> is 3 and this is valid only in the case that GPS chip keep opened always.. Unit: meter.
- ✧ <*movement detect mode*>: Enable or disable the movement detect function.

GL300 @Tracker Air Interface Protocol

0: Disable the movement detect function.

1: Enable the movement detect function. If the movement detect function is enabled, it will consider the device is non-movement if the speed according to the GPS fixing result is slower than *<movement speed>* and the distance between the current GPS point and the last moving GPS point is less than *<movement distance>*. After it considers the device is non-movement, it will stop reporting FRI message after report FRI messages (speed field is shown as -1 in these messages.) for *<movement send number>* times.

- ✧ *<movement speed>*: The speed threshold of movement detect. The unit is km/h.
- ✧ *<movement distance>*: The distance threshold of movement detect. The unit is meter.
- ✧ *<movement send number>*: According to the speed threshold and distance threshold, if the terminal is considered staying at one position, the terminal will send out at most this number of reports before it moves again.
- ✧ *<corner>*: A numeric to indicate whether to report +RESP:GTFRI message according to the heading changing, i.e. the movement direction of the device changing.
 - 0: disable the function, i.e. do not detect whether the device has changed its direction.
 - 1 – 180: The angle used for deciding whether the device turn around. If the heading changing is greater than the specified value, the device will be considered turning around. Unit: degree.

Note:

✧ Check interval

If *<GPS On Need>* was set as 1 or *<GPS On Need>* was set as 2 without ignition on, The terminal has two modes to operate the GPS module according to the value of *<Check interval>*:

- Mode 1: If the *<Check interval>* is more than 60 seconds, the terminal will close the GPS part every time after GPS fixing finishes in order to save power.
- Mode 2: If the *<Check interval>* is less than 60 seconds, the terminal will never close the GPS part in this mode.

Due to the maximum length limitation of the report message, it must be assured that: *<Send interval> / <Check Interval> <= 15*. If exceed that limitation, the command is discarded and the previous settings keep untouched.

If the terminal is in “Force on SMS Mode” (*<Report mode>* = 5) while the *<Send interval> / <Check Interval> > 1*, the terminal will report only the last position in the fixed timing report, because only one position could be filled in one single SMS message (160 bytes at most).

✧ Action time range

- *<Begin time> <<End time>*: reports in the time period (begin time, end time) every day.
- *<Begin time> > <End time>*: reports starting from *<Begin time>* and stopping at *<End time>* on the following day.
- *<Begin time> = <End time>*: reports on the whole day.

✧ Scheduled Report Mode

For the mode schedule distance report and scheduled mileage report and optimum report, *<GPS on need>* must be 0 (Never close GPS chip) or 2 (Never close GPS chip in ignition on state or

GL300 @Tracker Air Interface Protocol

movement state) for the function. For the mode scheduled timing report, it doesn't care whether GPS works always.

❖ **Corner report**

It is necessary to set <GPS on need> as 0 or 2 for detecting turning point. Because the detection for turning point is based on heading in GPS position which is not so accurate, it could make mistake to detect turning point sometimes.

The acknowledgement message of AT+GTFRI command:

➤ +ACK:GTFRI,

Example:

+ACK:GTFRI,1A0100,135790246811220,,0007,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.8. Geo-Fence Information

The command **AT+GTGEO** is used to configure the parameters of Geo-Fence. Geo-Fence is a virtual perimeter on a geographic area using a location-based service, so that when the geofencing terminal enters or exits the area a notification is generated. The notification can contain information about the location of the terminal and may be sent to the backend server.

➤ **AT+GTGEO=**

Example:

AT+GTGEO=gl300,0,3,101.412248,21.187891,1000,600,,,,,,,0008\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	gl300
GEO ID	1	0 – 4	
Mode	1	0 – 3	0
Longitude	<=11	(-)xxx.xxxxxx	
Latitude	<=10	(-)xx.xxxxxx	
Radius	<=7	50 – 6000000m	50
Check interval	<=5	0 30 – 86400sec	0
State mode	1	0 1	0
Reserved	0		
Reserved	0		

GL300 @Tracker Air Interface Protocol

Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ◊ <GEO ID>: A numeric to identify the Geo-Fence.
- ◊ <Mode>: A numeric which indicates when to report the notification to the backend server based on the following:
 - 0: Disable the Geo-Fence on the specified GEO ID.
 - 1: Reports when enters the Geo-Fence.
 - 2: Reports when leaves the Geo-Fence.
 - 3: Reports when enters or leaves the Geo-Fence.
- ◊ <Longitude>: The longitude of a point which is defined as the center of the Geo-Fence circular region. The format is “(-)xxx.xxxxxx” and the value range is from “-180.000000” to “180.000000”. The unit is degree. West longitude is defined as negative starting with minus “-” and east longitude is defined as positive without “+”.
- ◊ <Latitude>: The latitude of a point which is defined as the centre of the Geo-Fence circular region. The format is “(-)xx.xxxxxx” and the value range is from “-90.000000” to “90.000000”. The unit is degree. South Latitude is defined as negative starting with minus “-” and north Latitude is defined as positive without “+”.
- ◊ <Radius>: The radius of the Geo-Fence circular region. The value range is (50-6000000) and the unit is meter.
- ◊ <Check interval>: The interval of GPS checking for the Geo-Fence alarm.
- ◊ <state mode>:
 - 0: It should report when get the state first time.
 - 1: It doesn't report until the state changes.

Note:

If the parameter <Check interval> is set as 0, <Mode> will be set as 0 automatically (To Geo-Fence 0, <Mode> will be restored at first and it could be used later when switch on Geo-Fence 0 via Function Key), because the terminal doesn't know when to check Geo-Fence if the parameter <Check interval> is 0.

The acknowledgement message of AT+GTGEO command:

➤ +ACK:GTGEO,

Example:

+ACK:GTGEO,1A0100,135790246811220,,0,0008,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		

GEO ID	1	0 – 4	
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.9. Speed Alarm

The AT+GTSPD command is used to configure speed alarm of the device. Based on the working mode set, the device will report speed alarm when its speed is outside or inside of a predefined range.

➤ AT+GTSPD=

Example:

AT+GTSPD=gl300,1,5,40,30,60,,,,,,,,0009\$

AT+GTSPD=gl300,2,0,80,30,60,,,,,,,,0009\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	gl300
Mode	1	0 1 2	0
Min speed	<=3	0 – 400km/h	0
Max speed	<=3	0 – 400km/h	0
Duration	<=4	15 – 3600sec	60
Send interval	<=4	0 5 – 3600sec	300
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

❖ <Mode>: A numeric to indicate the working mode of speed alarm.

GL300 @Tracker Air Interface Protocol

- 0: Disable speed alarm.
1: Enable speed alarm. If the current speed is within the speed range defined by min speed and max speed, a speed alarm is sent.
2: Enable speed alarm. If the current speed is outside the speed range defined by min speed and max speed, a speed alarm is sent.
- ✧ <Min speed>: The lower limit of the speed range.
 - ✧ <Max speed>: The upper limit of the speed range.
 - ✧ <Duration>: According to the working mode, if the speed satisfies the specified speed range and maintains a period of time defined by <Duration>, the speed alarm will be triggered.
 - ✧ <Send interval>: After the speed alarm is triggered, the speed alarm message is sent every interval time, but when the send interval is set to 0, the speed alarm message will be sent only once.

Note:

The parameter <Duration> and <Send interval> are invalid when GPS doesn't open always. When GPS doesn't open always, it will report speed alarm immediately if it detects the speed of the terminal is out of the allowed speed range.

The acknowledgement message of AT+GTSPD command:

➢ +ACK:GTSPD,

Example:

+ACK:GTSPD,1A0100,135790246811220,,0009,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.10. Function Key Setting

The AT+GTFKS command is used to configure the function of the power key and the function key.

➢ AT+GTFKS=

Example:

AT+GTFKS=gl300,1,,1,1,1,,ffff\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	gl300
Power key mode	1	0 1 2	1
Full power up	1	0 1	1
Function key mode	1	0 1 2 3	3

GL300 @Tracker Air Interface Protocol

Power key ind	0	0 1	0
Function key ind	0	0 1	0
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <*Power key mode*>: A numeric to indicate the working mode of the power key.
 - 0: Press power key will not power down the device.
 - 1: Press power key will power down the device.
 - 2: Press power key after long press for 1.5 seconds, it will work as SOS mode.
- ✧ <*Full power up*>: A numeric to indicate whether the terminal powers on completely after the terminal was power on because of charger inserted.
 - 0: Do not power on the terminal completely. And the terminal will only work on charging.
 - 1: Power on the terminal completely. The terminal will work normally as power on by power key long pressed.
- ✧ <*Function key mode*>: The working mode for the function key operation..
 - 0: Ignore the function key operation.
 - 1: Geo-Fence mode. Switch on/off the Geo-Fence ID 0 when the function key is long pressed. And after long press the function key, the terminal will report the message **+RESP:GTSWG** to inform to switch on or off Geo-Fence ID 0 via this operation.
 - 2: Geo-Fence in current position. Switch on/off the Geo-Fence 0 when the function key is long pressed and use the current position as the centre of Geo-Fence 0 when switch on the Geo Fence 0 via the function key. After long press the function key, the terminal will report the message **+RESP:GTSWG** immediately. And if this operation is expected to switch on Geo-Fence ID 0, the terminal will start GPS fixing to get the current position as the centre of Geo-Fence ID 0. After GPS fixing finishes, it will report the message **+RESP:GTGCR** to inform the result of GPS fixing and whether Geo-Fence ID 0 was switched on successfully.
 - 3: SOS mode. After long press for 3 seconds, the device will report the current position according to the result of the latest GPS fixing and then start GPS fixing. After the GPS fixing finishes or timeout, the device will report the SOS message according the result of the GPS fixing.
- ✧ <*Power key ind*>: A numeric to indicate the working mode of the motor for power key.
 - 0: Disable drive the motor when the power key is long pressed
 - 1: Drive the motor vibration when the power key is long pressed to power off
- ✧ <*Function key ind*>: A numeric to indicate the working mode of the motor for function key.
 - 0: Disable drive the motor when the function key is long pressed
 - 1: Drive the motor vibration when the function key is long pressed

The acknowledgement message of **AT+GTFKS** command:

➤ +ACK:GTFKS,

Example:

```
+ACK:GTFKS,1A0100,135790246811220,,000A,20100310172830,11F0$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.11. Real Time Operation

The **AT+GTRTO** command is used to retrieve information from the terminal or control the terminal.

➤ **AT+GTRTO=****Example:**

```
AT+GTRTO=gl300,0,,,,,,000B$
```

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	gl300
Sub command	1	0 – F	
Single Configuration Command	3		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Sub command>: A numeric to indicate the sub command to execute.

0 (**GPS**): Request GPS related information, including setting of *<GPS on need>*, *<Report items mask>*, *<Report mask>* of fixed report, GPS antenna type, GPS antenna status and the last known time of successful GPS fixing.

1 (**RTL**): Request the device to report its current position.

2 (**READ**): Request the device to report its entire configuration.

3 (**REBOOT**): Reboot the device remotely.

4 (**RESET**): Reset all parameters to factory default except parameter of **AT+GTBSI**, **AT+GTSRI**, **AT+GTTMA**.

5 (**PWROFF**): Power off the device remotely.

6 (**CID**): Request the device to report the ICCID of the installed SIM card.

GL300 @Tracker Air Interface Protocol

- 7 (**CSQ**): Request the device to report the current GSM signal level.
 - 8 (**VER**): Request the device to report version information including the device type, the firmware version and the hardware version.
 - 9 (**BAT**): Request the device to report power supply related information including the external power supply status, current voltage of the battery, the battery charging status and the working mode of LED.
 - A (**TMZ**): Request the device to report the time zone setting.
 - B: (**INF**): Read the device information report function. The corresponding information will be reported via the message +RESP:GTINF.
 - C: (**RESERVED**)
 - D: (**RESERVED**)
 - E: (**GSV**): Request the device to report the GPS fix level.
 - F: (**GSM**): Request the device to report the cells' information.
- ❖ <Single Configuration Command>: Get the specified command configuration of the terminal via the message +RESP:GTALS. For example, it is OK to get the configuration of AT+GTCFG by the command “AT+GTRTO=gl300,2,CFG,,,,,000F\$”. NOTE: This parameter is available only when <Sub Command> is set to 2. If the parameter is default, the terminal will report all configuration via the message +RESP:GTALL.

The acknowledgement message of **AT+GTRTO** command:

➤ +ACK:GTRTO,

Example:

+ACK:GTRTO,1A0100,135790246811220,,GPS,000B,20100310172830,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Sub command	<=6	Sub command string	
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.12. White Call List Configuration

The **AT+GTWLT** command is used to set white call list table.

➤ **AT+GTWLT=**

Example:

AT+GTWLT=gl300,1,1,2,13813888888,13913999999,,,,,000C\$

Parameter	Length(byte)	Range/format	Default
password	4~6	‘0’-‘9’,‘a’-‘z’,‘A’-‘Z’	gl300
call filter	1	0 1 2	1
mobile start	1	1-10	

GL300 @Tracker Air Interface Protocol

mobile end	1	1-10	
white number list	<=20*10		
reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	

- ❖ <call filter>: A numeric to indicate whether to filter the incoming call according to <white number list> and <direct number list> before it tries to send google link SMS to the incoming number.
 - 0: Do not return a google link SMS to incoming number no matter what the parameter <location by call> was set and no matter whether the incoming number is in the <white number list> or <direct number list>.
 - 1: Do not filter the incoming call. It will return a google link SMS to the incoming number as long as the parameter <location by call> was set as 1.
 - 2: Filter the incoming call. If the incoming number isn't in <white number list> or <direct number list>, it won't return a google link SMS to the incoming number even if the parameter <location by call> was set as 1.
- ❖ <mobile start>: A numeric to indicate the first index of the white call number to input. For example, if it is 1, it will update the white call list from the 1st one. If it is empty, it should not include <white number list> later.
- ❖ <mobile end>: A numeric to indicate the last index of the white call number to input. For example, if it is 2, it will update the white call list until the 2nd one. If it is empty, it should not include <white number list> later.
- ❖ <white number list>: A phone number list. It could include several phone numbers. And two close phone numbers are separated with ",". The number of the phone number in the list is up to the parameter <mobile start> and <mobile end>. For example, if <mobile start> is 1 and <mobile end> is 2, the <white number list> should include 2 phone numbers and the two numbers are separated with ",".

The acknowledgment message of the AT+GTWLT command:

➤ +ACK:GTWLT,

Example:

+ACK:GTWLT,1A0100,135790246811220,,000C,20101029085505,0025\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	

GL300 @Tracker Air Interface Protocol

Count number	4	0000 – FFFF	
Tail character	1	\$	\$

Note:

It is necessary to make sure the total size of the command is not greater than 160 if it is sent via SMS.

4.2.13. Google link SMS configuration

The **AT+GTGLM** command is used to configure whether to send SMS with google link for SOS and GEO event.

➤ **AT+GTGLM=**

Example:

AT+GTGLM=gl300,1,1,2,13813888888,13913999999,,,000D\$

Parameter	Length(byte)	Range/format	Default
password	4~8	‘0’-‘9’, ‘a’-‘z’, ‘A’-‘Z’	gl300
google mode	1	0 1 2	0
mobile start	1	1-3	
mobile end	1	1-3	
direct number list	<=20*3		
reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	

- ✧ <*google mode*>: A numeric to indicate whether to send a SMS with google link to the number in <*direct number list*> for SOS and GEO event.
 - 0: Do not send a SMS with google link to the number is in the <*direct number list*> for SOS and GEO event.
 - 1: Send a SMS with google link to the number is in the <*direct number list*> for SOS and GEO event and include the terminal name in the google hyperlink.
 - 2: Send a SMS with google link to the number is in the <*direct number list*> for SOS and GEO event and do not include the terminal name in the google hyperlink.
- ✧ <*mobile start*>: A numeric to indicate the first index of the direct number to input. For example, if it is **1**, it will update the direct number list from the **1st** one. If it is empty, it should not include <*direct number list*> later.
- ✧ <*mobile end*>: A numeric to indicate the last index of the direct number to input. For example, if it is **2**, it will update the direct number list until the **2nd** one. If it is empty, it should not include <*direct number list*> later.
- ✧ <*direct number list*>: A phone number list. It could include several phone numbers. And two close phone numbers are separated with ",". The number of the phone number in the list is up

GL300 @Tracker Air Interface Protocol

to the parameter <mobile start> and <mobile end>. For example, if <mobile start> is 1 and is <mobile end> 2, the <direct number list> should include 2 phone numbers and the two numbers are separated by with ",".

The acknowledgment message of the AT+GTGLM command:

➤ +ACK:GTGLM,

Example:

+ACK:GTGLM,1A0100,135790246811220,,000D,20101029085505,0025\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.14. Auto unlock SIM-PIN

The AT+GTPIN command is used to configure whether to automatically unlock the PIN of the SIM card in the device.

➤ AT+GTPIN=

Example:

AT+GTPIN=gl300,1,1234,1,,,000E\$

Parameter	Length(byte)	Range/format	Default
password	4~6	'0'-'9', 'a'-'z', 'A'-'Z'	gl300
auto unlock PIN	1	0 1	1
PIN	4~8	'0'-'9'	
PIN checking	1	0 1	0
reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	

✧ <auto unlock PIN>: A numeric to indicate whether to unlock the SIM-PIN for the device.

0: Do not unlock SIM-PIN automatically.

1: Each time the device powers on, it will detect whether the SIM card is locked with a PIN. If it is locked, the device will unlock the PIN automatically for one time.

✧ <PIN>: The PIN code which is used when unlocks PIN automatically. If it is empty, the PIN code saved in the device will be cleared.

✧ <PIN checking>: A numeric to indicate whether to lock the device with SIM-PIN.

GL300 @Tracker Air Interface Protocol

0: Do not lock the SIM-PIN.

1: Lock the SIM-PIN.

The acknowledgment message of the **AT+GTPIN** command:

➤ +ACK:GTPIN,

Example:

+ACK:GTPIN,1A0100,135790246811220,,000E,20101029085505,0027\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.15. Digital Input Port Settings

➤ AT+GTDIS

Example:

AT+GTDIS=gl300,1,1,5,,,,,0010\$

Parameter	Length(byte)	Range/format	Default
password	4~6	‘0’-‘9’, ‘a’-‘z’, ‘A’-‘Z’	gl300
Input ID	1	1	1
Mode	1	0 1 2 3	0
Debounce time	<=2	0-20 (×10ms)	5
reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	

✧ <Input ID>: The ID of the digital input. It is always 1. If the field is empty, the device will ignore the following settings about the digital input 1, i.e. change nothing about the digital input 1.

✧ <Mode>: A numeric to check whether to enable the digital input.

- 0: Disable the digital input, i.e. ignore the status changing of the digital input.
- 1: Enable the digital input. If the status of the input changes, the device will report the message **+RESP:GTDIS** to the backend server to inform the latest status.
- 2: If the status of the input is changed to 0, the device will disable the sleep mode. If the status of the input is changed to 1, the device will enable the sleep mode.

GL300 @Tracker Air Interface Protocol

- 3: If the status of the input is changed to 0, it will trigger the SOS event.
- ✧ <Debounce time>: The time for debouncing.

The acknowledgment message of the AT+GTDIS command:

➤ +ACK:GTDIS,

Example:

+ACK:GTDIS,1A0100,135790246811220,,0010,20101029085505,0028\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.16. Protocol watchdog

The AT+GTDOG command is used to reboot the device in a time based manner or upon ignition. This helps the device avoid working in an exceptional status for a long time. Besides these two automatically reboot method, the device also supports to use the digital input to trigger the reboot manually.

➤ AT+GTDOG=

Example:

AT+GTDOG=gl300,1,,1,0130,,1,1,,,0011\$

AT+GTDOG=gl300,2,30,,,1,1,,,0011\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	gl300
Mode	1	0 1 2	0
Ignition Frequency	<=3	10-120	60
Interval	<=2	1-30	30
Time	4	HHMM	0200
Reserved	0		
Report Before Reboot	1	0 1	1
Input ID	1	0 1	0
Unit	1	0 1	0
Gsm interval	4	5-1440min	60min
Pdp interval	4	5-1440min	60min
Reserved	0		
Serial number	4	0000 – FFFF	

GL300 @Tracker Air Interface Protocol

Tail character	1	\$	\$
----------------	---	----	----

- ❖ <Mode>: Working mode.
 - 0: Disable this function
 - 1: Reboot periodically according to the <Interval> and <Time> setting.
 - 2: Reboot when ignition on.
- ❖ <Ignition Frequency>: When the working mode is 2, if the time interval between two adjacent ignitions is greater than the specified value, the device will automatically reboot upon ignition on.
- ❖ <Interval>: The interval to reboot the device.
- ❖ <Time>: At what time to perform the reboot operation when <Interval> is met.
- ❖ <Report Before Reboot>: Whether to report the +RESP:GTDOG message before reboot. 0 means no report, 1 to report. If this is enabled, the device will make a real-time location before sending the message in order to send it with the current location information.
- ❖ <Input ID>: ID of the digital input port which is used to trigger the manually reboot. 0 means do not use manual reboot. Only port 1 is supported.
- ❖ <Unit>: Unit.
 - 0: Unit is day.
 - 1: Unit is hour.
- ❖ <Gsm interval>: The time in minute before rebooting the terminal when the GSM is not registered.
- ❖ <Pdp interval>: The time in minute before rebooting the terminal if it is failed to activate PDP context.

The acknowledgment message of the AT+GTDOG command:

➤ +ACK:GTDOG,

Example:

+ACK:GTDOG,1A0100,135790246811220,,0011,20101029085505,0028\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.17. Data transfer between UART and backend server

The AT+GTDAT command is used to transfer the data between UART and the backend server.

➤ AT+GTDAT=

Example:**AT+GTDAT=gl300,0,,data needs to be sent,0,,,0016\$****AT+GTDAT=gl300,1,,config command to the CAN bus device,1,,,0016\$**

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	gl300
Command Type	1	0 1	0
Reserved	0		
Data	<=100	ASCII code	
Need ack	1	0 1	0
Reserved	0		
Reserved	0		
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Command Type>: A numeric to indicate the direction of the transferred data.
 - 0: The data should be transferred from UART to the backend server.
 - 1: The data should be transferred from the backend server to UART.
- ✧ <Data>: The data to be transferred. It should be printable ASCII string.
- ✧ <Need ack>: A numeric to indicate whether the device should reply +ACK message to the backend server.
 - 0: Do not send +ACK:GTDAT to the backend server.
 - 1: Send +ACK:GTDAT to the backend server.

The acknowledgment message of the AT+GTDAT command:

> +ACK:GTDAT

Example:**+ACK:GTDAT,1A0100,135790246811220,,0011,20101029085505,0028\$**

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’–‘Z’, ‘0’–‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.18. Network Select

The AT+GTNTS command is used to set network when in low signal.

GL300 @Tracker Air Interface Protocol

➤ AT+ GTNTS =

Example:

AT+GTNTS=gl300,1,20,2,46001,,,FFFF\$

Parameter	Length (byte)	Range/Format	Default
Password	4 – 6	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	gl300
enable	1	0 1	0
Rssi threshold	3	0 – 35	30
Interval	3	0 – 300min	10
Oper1	10		
Oper2	10		
Oper3	10		
GSM interval	3	0 – 300min	10
Reserved	0		
Serial number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ <Enable>: Enable or disable “NTS” based functionality.
 - 0: Disable
 - 1: Enable
- ❖ <Rssi threshold>: The threshold of the CSQ value.
- ❖ <Interval>: The interval time to change to another opetor.
- ❖ <Oper1>: The first network it will select when under threshold over interval time.
- ❖ <Oper2>: The second network it will select when under threshold over interval time.
- ❖ <Oper3>: The third network it will select when under threshold over interval time.
- ❖ <GSM Interval>: The time in minute before changing the operator without GSM network.

The acknowledgment message of the AT+ GTNTS command.

➤ +ACK:GTNTS

Example:

+ACK:GTNTS,1A0100,135790246811220,,0011,20101029085505,0028\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Serial number	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

4.2.19. Outside Working Hours

To protect the privacy of the driver when they are off duty, the device could be configured to

GL300 @Tracker Air Interface Protocol

report empty location information during the outside working hours. The command **AT+GTOWH** is used to define the working hours and the working mode to protect the privacy. When this function is enabled, the device will report empty latitude, empty longitude, empty LAC, empty Cell ID, empty MCC and empty MNC in all the report messages except for **+RESP:GTSOS**.

➤ **AT+GTOWH=**

Example:

AT+GTOWH=gl300,1,1F,0900,1200,1300,1730,,1,,,,,,,0012\$

Parameter	Length(byte)	Range/Format	Default
Password	4 – 6	'0' – '9' 'a' – 'z' 'A' – 'Z'	gl300
Mode	1	0 1 2 3	0
Day of Work	<=2	0 – 7F	1F
Working Hours Start1	4	HHMM	0900
Working Hours End1	4	HHMM	1200
Working Hours Start2	4	HHMM	1300
Working Hours End2	4	HHMM	1800
Reserved	0		
Reserved	0		
Digital Input ID	1	0 1	0
Reserved	0		
Serial Number	4	0000 – FFFF	
Tail Character	1	\$	\$

✧ <Mode>: Working mode.

- 0: Disable this function.
- 1: Manual mode. Use the specified digital input (refer to the parameter <*Digital Input ID*>) to control whether to check working hours. After the digital input is enabled, if the device finds it is outside of the working hours, it will hide the location information. Otherwise report normally.
- 2: Full manual mode. Use the specified digital input (refer to the parameter <*Digital Input ID*>) to control whether to hide the location information. It hides the location information when the input is enabled and reports normally when the input is disabled.
- 3: Automatic mode. Under this mode, the device will ignore the status of the digital input. It will automatically check the current time against the working hours arrange. If it is outside of the working hours, the device will hide the location information.

GL300 @Tracker Air Interface Protocol

Otherwise report normally.

✧ <Day of Work>: Specify the working days in a week in a bitwise manner.

- Bit 0 for Monday
- Bit 1 for Tuesday
- Bit 2 for Wednesday
- Bit 3 for Thursday
- Bit 4 for Friday
- Bit 5 for Saturday
- Bit 6 for Sunday

For each bit, 0 means off day, 1 means working day.

✧ <Working Hours Start1>, <Working Hours End1>: The first period of the working hours in a day.

✧ <Working Hours Start2>, <Working Hours End2>: The second period of the working hours in a day.

✧ <Digital Input ID>: The input ID used to trigger this function when mode is 1 or 2. Only digital input port 1 is supported.

The acknowledgment message of AT+GTOWH command:

➤ +ACK:GTOWH,

Example:

+ACK:GTOWH,1A0100,135790246811220,,0012,20090214093254,11F0\$

Parameter	Length(byte)	Range/Format	Default
Protocol Version	6	XX0000 – XXFFFF, X ∈ {‘A’ – ‘Z’, ’0’ – ‘9’}	
Unique ID	15	IMEI	
Device Name	<=20	'0' – '9' 'a' – 'z' 'A' – 'Z' '-' '_'	
Serial Number	4	0000 – FFFF	
Send Time	14	YYYYMMDDHHMMSS	
Count Number	4	0000 – FFFF	
Tail Character	1	\$	\$

4.2.20. Voice Monitoring

The command AT+GTMON is used to set stealthy voice monitoring. After the command is executed, the device will send the message +RESP:GTMON to the backend server via SMS.

➤ AT+GTMON=

Example:

AT+GTMON=gl300,2,+8613812341234,5,,,000E\$

Parameter	Length(byte)	Range/Format	Default
Password	4 – 6	'0' – '9' 'a' – 'z' 'A' – 'Z'	gl300
Mode	1	0–3	0
Stealthy Phone Number	<=20		

GL300 @Tracker Air Interface Protocol

Stealthy Microphone	2	0 – 31	20
Reserved	0		
Serial Number	4	0000 – FFFF	
Tail Character	1	\$	\$

✧ <Mode>: Stealthy voice monitoring mode.

- 0: Disable stealthy voice monitoring.
- 1: Call in the specified phone number (< Stealthy Phone Number >) when execute the command AT+GTMON.
- 2: Open stealthy voice monitoring automatically when a call is incoming that the incoming number is in <white number list>.
- 3: Call in the specified phone number (< Stealthy Phone Number >) when execute the command AT+GTMON and open stealthy voice monitoring when a call is incoming that the incoming number is in <white number list>.

✧ <Stealthy Phone Number>: The phone number to make stealthy voice call.

✧ <Stealthy Microphone>: Set the volume of the microphone, 0 means disable microphone.

The acknowledgment message of AT+GTMON command:

➤ +ACK:GTMON,

Example:

+ACK:GTMON,040100,135790246811220,,000E,20090214093254,11F0\$

Parameter	Length(byte)	Range/Format	Default
Protocol Version	6	XX0000 – XXFFFF, X ∈ {‘A’ – ‘Z’, ‘0’ – ‘9’}	
Unique ID	15	IMEI	
Device Name	<=20	'0' – '9' 'a' – 'z' 'A' – 'Z' '-' '_'	
Serial Number	4	0000 – FFFF	
Send Time	14	YYYYMMDDHHMMSS	
Count Number	4	0000 – FFFF	
Tail Character	1	\$	\$

4.2.21. Temperature Alarm

The AT+GTTEM command is used to configure temperature alarm of the device. Based on the working mode set, the device will report temperature alarm when its temperature is outside or inside of a predefined range.

➤ AT+GTTEM=

Example:

AT+GTTEM=gl300,1,-05,10,15,30,,,,,,000E\$

GL300 @Tracker Air Interface Protocol

Parameter	Length(byte)	Range/Format	Default
Password	4 – 6	'0' – '9' 'a' – 'z' 'A' – 'Z'	gl300
mode	1	0 1 2 3	0
Min temperature	<=3	-20 – -60	0
Max temperature	<=3	-20 – -60	0
Duration	<=4	0 – 3600sec	60
Send interval	<=4	0 5 – 3600sec	300
Reserved	0		
Serial Number	4	0000 – FFFF	
Tail Character	1	\$	\$

- ✧ <mode>: A numeric to indicate the working mode of temperature alarm.
 - 0: Disable this function.
 - 1: Report the alarm message +RESP:GTTEM when the current temperature is lower than the lowest temperature defined by <Min temperature>.
 - 2: Report the alarm message +RESP:GTTEM when the current temperature is inside of the temperature range.
 - 3: Report the alarm message +RESP:GTTEM when the current temperature is higher than the highest temperature defined by <Max temperature>.
- ✧ <Min temperature>: The lower limit of the temperature range
- ✧ <Max temperature>: The upper limit of the temperature range
- ✧ <Duration>: According to the working mode, if the temperature is in the specified temperature range and maintains a period of time defined by <Duration>, the temperature alarm will be triggered.
- ✧ <Send interval>: After the temperature alarm is triggered, the temperature alarm message will be sent each time of <Send interval>, but when the send interval is set to 0, the temperature alarm message will be sent only once.

The acknowledgment message of AT+GTTEM command:

➢ +ACK:GTTEM,

Example:

+ACK:GTTEM, 1A0100,135790246811220,,000E,20090214093254, 000E\$

Parameter	Length(byte)	Range/Format	Default
Protocol Version	6	XX0000 – XXFFFF, X ∈ {‘A’ – ‘Z’, ‘0’ – ‘9’}	
Unique ID	15	IMEI	
Device Name	<=20	'0' – '9' 'a' – 'z' 'A' – 'Z' '-' '_'	
Serial Number	4	0000 – FFFF	

GL300 @Tracker Air Interface Protocol

Send Time	14	YYYYMMDDHHMMSS	
Count Number	4	0000 – FFFF	
Tail Character	1	\$	\$

4.3. Report

4.3.1. Position Related Report

4.3.1.1. General Position Report

- +RESP:GTFRI: report of AT+GTFRI
- +RESP:GTGEO: report of AT+GTGEO
- +RESP:GTSPD: report of AT+GTSPD
- +RESP:GTSOS: report after long press the function if the function key is enabled and the mode is SOS mode.
- +RESP:GTRTL: report of AT+GTRTO-RTL
- +RESP:GTPNL: The first location after the device powers on.
- +RESP:GTNMR: non movement is detected by motion sensor, according to the setting of AT+GTNMD
- +RESP:GTDIS: the status of digital input is detected being changed if the parameter <Enable> is set as 1 in the command AT+GTDIS
- +RESP:GTDOG: the protocol watchdog reboot message.
- +RESP:GTIGL: The location message for ignition on and ignition off.

Example:

+RESP:GTFRI,1A0100,135790246811220,,0,0,1,1,4,3,92,70,0,121.354335,31.222073,20090

214013254,0460,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTFRI,1A0100,135790246811220,,0,0,2,1,4,3,92,70,0,121.354335,31.222073,20090

214013254,0460,0000,18d8,6141,00,0,4,3,92,70,0,121.354335,31.222073,20090101000000,04
60,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTGEO,1A0100,135790246811220,,0,0,1,1,4,3,92,70,0,121.354335,31.222073,20090

0214013254,0460,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTSPD,1A0100,135790246811220,,0,0,1,1,4,3,92,70,0,121.354335,31.222073,20090

214013254,0460,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTSOS,1A0100,135790246811220,,0,0,1,1,4,3,92,70,0,121.354335,31.222073,20090

214013254,0460,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTRTL,1A0100,135790246811220,,0,0,1,1,4,3,92,70,0,121.354335,31.222073,20090

214013254,0460,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTPNL,1A0100,135790246811220,,0,0,1,1,4.3,92,70.0,121.354335,31.222073,20090
214013254,0460,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTNMR,1A0100,135790246811220,,0,0,1,1,4.3,92,70.0,121.354335,31.222073,2009
0214013254,0460,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTDIS,1A0100,135790246811220,,0,0,1,1,4.3,92,70.0,121.354335,31.222073,20090
214013254,0460,0000,18d8,6141,00,,20090214093254,11F0\$

+RESP:GTDODG,1A0100,135790246811220,,0,0,1,1,4.3,92,70.0,121.354335,31.222073,2009
0214013254,0460,0000,18d8,6141,00,2000.0,20090214093254,11F0\$

+RESP:GTIGL,02010A,867844000125073,,00,1,5,,,117.201362,31.832724,2012082103203
7,||||,,000C\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’, ‘-’, ‘_’}	
Unique ID	15	IMEI	
Device name	20		
Report ID	1	0 – 4	
Report type	1	0 1	
Number	<=2	0 – 15	
GPS accuracy	<=2	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	(-)xxxxx.x m	
Longitude	<=11	(-)xxx.xxxxxxx	
Latitude	<=10	(-)xx.xxxxxxx	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
battery percentage	3	0-100	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Report ID>: ID of Geo-Fence in +RESP:GTGEO, ID of input id in +RESP:GTDIS,0 for other reports.
- ✧ <Report type>: type of the report for +RESP:GTGEO and +RESP:GTSPD and

+RESP:GTNMR, 0 for other reports.

- For +RESP:GTFRI

0: This is a common scheduled position report.

1: This is a turning point.

- For +RESP:GTGEO

0: exit the corresponding Geo-Fence.

1: enter the corresponding Geo-Fence.

- For +RESP:GTSPD

0: Outside the speed range.

1: Inside the speed range.

- For +RESP:GTNMR

0: The state of the device changed from motion to rest.

1: The state of the device changed from rest to motion.

- In the +RESP:GTDIS report message generated by the digital input

0: The current logical status of the input port is low level

1: The current logical status of the input port is high level

- In the message of ignition on and ignition off message +RESP:GTIGL

0: the engine is ignition on.

1: the engine is ignition off.

- For +RESP:GTDODG

0: Reboot periodically according to the <Interval> and <Time> setting or ignition on or <Input ID> cases to reboot.

1: GPRS network registered unsuccessful cases to reboot

2: Without GSM signal cases to reboot

- ❖ <Number>: Number of points in one report message. According to the setting of fixed report, there could be up to 15 points in one +RESP:GTFRI report. For other reports, this is always 1. If there are more than 1 point in the report, information from <GPS accuracy> to <Odo mileage> is repeated for each point.
- ❖ <GPS accuracy>: The HDOP defined in NMEA0183. The range of value is 1 – 50. The smaller the value, the higher the precision. Different from NMEA0183, 0 here means no fix, while GPS accuracy between 0 and 1 is set to 1.
- ❖ <Speed>: The speed from GPS.
- ❖ <Azimuth>: The azimuth from GPS.
- ❖ <Altitude>: The height above sea level from GPS.
- ❖ <Longitude>: The longitude of the current position. The format is “(-)xxx.xxxxxx” and the value range is from “-180.000000” to “180.000000”. The unit is degree. West longitude is defined as negative starting with minus “-” and east longitude is defined as positive without “+”.
- ❖ <Latitude>: The latitude of the current position. The format is “(-)xx.xxxxxx” and the value range is from “-90.000000” to “90.000000”. The unit is degree. South Latitude is defined as negative starting with minus “-” and north Latitude is defined as positive without “+”.
- ❖ <GPS UTC time>: UTC time from GPS.
- ❖ <MCC>: Mobile country code. It is 3 digits in length and ranges from 000-999.
- ❖ <MNC>: Mobile network code. It is 3 digits in length and ranges from 000-999.

GL300 @Tracker Air Interface Protocol

- ✧ <LAC>: Location area code in hex format.
- ✧ <Cell ID>: Cell ID in hex format.
- ✧ <Odo mileage>: The total mileage in the position defined by <Latitude> and <Longitude>. If <ODO enable> was set as 0 in the command AT+GTCFG, the field will be empty.
- ✧ <battery percentage>: The current volume of the battery in percentage.

4.3.1.2. Location by Call Report

➤ +RESP:GTLBC:

Example:

```
+RESP:GTLBC,1A0100,135790246811220,,+8613800000000,1,4.3,92,70.0,121.354335,31.2
22073,20090214013254,0460,0000,18d8,6141,00,,20090214093254,11F0$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Call number	<=20	phone number	
GPS accuracy	<=2	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXXX.X m	
Longitude	<=11	± XXX.XXXXXXX	
Latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Reserved2	0		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Call number>: the phone number of the incoming call which initiates this report.

4.3.1.3. Location as centre of Geo-Fence

If function key mode was set as 2 and long press function key to switch on Geo-Fence 0, the terminal will start GPS fixing to get the current position as the centre of Geo-Fence 0. And after GPS fixing finishes, the terminal will report the message +RESP:GTGCR.

➤ +RESP:GTGCR:

Example:

```
+RESP:GTGCR,1A0100,135790246811220,,3,50,180,2,0,4,296,-5,4,121,391055,31,164473,2
0100714104934,0460,0000,1878,0873,00,,20100714104934,000C$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Geo mode	1	0 1 2 3	
Geo radius	<=7	50 – 6000000m	
Geo check interval	<=5	0 30 – 86400sec	
GPS accuracy	<=2	0 1 – 50	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Longitude	<=11	± XXX.XXXXXXX	
Latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Reserved2	0		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <Geo mode>: the new mode of Geo-Fence 0. Please refer to the parameter <Mode> in the command **AT+GTGEO**.
- ✧ <Geo radius>: the radius of Geo-Fence 0. Please refer to the parameter <Radius> in the command **AT+GTGEO**.
- ✧ <Geo check interval>: the check interval of Geo-Fence 0. Please refer to the parameter <Check interval> in the command **AT+GTGEO**.
- ✧ <Longitude>: The longitude of the current position. If it is successful to fix position this time, this longitude will replace the longitude of the centre of Geo-Fence 0.
- ✧ <Latitude>: The latitude of the current position. If it is successful to fix position this time, this latitude will replace the latitude of the centre of Geo-Fence 0.

4.3.2. Device Information Report

- +RESP:GTINF:

Example:

```
+RESP:GTINF,1A0100,135790246811220,,41,898600810906F8048812,16,0,0,0,,4.10,0,0,0,0,  
,20100214013254,,,+0800,0,20100214093254,11F0$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
State	2	21 22 41 42	
ICCID	20		
CSQ RSSI	<=2	0 – 31 99	
CSQ BER	<=2	0 – 7 99	
External power supply	1	0 1	
Mileage	<=9	0.0 – 4294967.0Km	
Reserved	0		
Battery voltage	<=4	0.0 – 4.50V	
Charging	1	0 1	
LED on	1	0 1 2	
GPS on need	1	0 1 2 3	
GPS antenna type	1	0	
GPS antenna state	1	0	
Last GPS fix UTC time	14	YYYYMMDDHHMMSS	
battery percentage	3	0-100	
Flash type	1	0 1	
Temperature	<=3	XX□	
Reserved	0		
Reserved	0		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <State>: The current motion state of the device.

21: The device attached vehicle is ignition on and motionless.

22: The device attached vehicle is ignition on and moving.

41: The device is motionless without ignition on.

42: The device is moving without ignition on.

✧ <ICCID>: The ICCID of the installed SIM card.

✧ <CSQ RSSI>: The GSM signal strength level.

✧ <CSQ BER>: The quality of the GSM signal.

✧ <External power supply>: Whether the external power supply is connected.

0: Not connected

1: Connected

GL300 @Tracker Air Interface Protocol

- ✧ <Mileage>: The total mileage is base on <ODO Initial mileage> which is a parameter in AT+GTCFG.
- ✧ <Battery voltage>: The voltage of the battery.
- ✧ <Charging>: Whether the battery is charging when the external power supply is connected.
 - 0: Not charging
 - 1: Charging
- ✧ <LED on>: The setting of <LED on> in AT+GTCFG.
- ✧ <GPS on need>: The setting of <GPS on need> in AT+GTCFG.
- ✧ <GPS antenna type>: A numeric to indicate which GPS antenna is working now.
 - 0: inside GPS antenna
- ✧ <GPS antenna state>: the status of the working GPS antenna.
 - 0: The antenna is working
- ✧ <Last GPS fix UTC time>: The UTC time of the latest successful GPS fixing.
- ✧ <Temperature>: The temperature of the device.
- ✧ <Flash type>: A numeric to indicate what the type of flash is.
 - 0: SST flash
 - 1: NMX flash

4.3.3. Report for Querying

These are the report of real time querying by command **AT+GTRTO**.

- +RESP:GTGPS: The report for real time operation GPS

Example:

```
+RESP:GTGPS,1A0100,135790246811220,,0,1F,1F,0,0,20100214013254,20100214093254,  
11F0$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
GPS on need	1	0 1 2 3	
GPS fix delay	3	5 – 60sec	
GPS antenna type	1	0	
Report items mask	<=4	0000 – FFFF	
FRI report mask	<=4	0000 – FFFF	
GPS antenna state	1	0	
Last GPS fix UTC time	14	YYYYMMDDHHMMSS	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ✧ <FRI report mask>: The setting of <Report mask> in AT+GTFRI.

GL300 @Tracker Air Interface Protocol

Example:

```
+RESP:GTALL,1A0100,860599000000448,GL300,BSI,cmnet,,,,,,SRI,2,,1,116.228.146.250
,8161,192.0.0.0,0,+8618600126107,5,0,,,CFG,gl300,GL300,1,0.8,0,5,003F,0,,0FFF,0,1,1,30
,0,1,0,20491231235959,1,0,,NMD,0,2,3,2,300,300,2,3,0,,,TMZ,+0000,0,FRI,3,0,,0000,0000,
30,30,180,180,001F,1000,100,0,5,50,5,0,,GEO,0,0,0,0,50,0,0,,,,1,0,0,0,50,0,0,,,,2,0,0,0,50
,0,0,,,,3,0,0,0,50,0,0,,,,4,0,0,0,50,0,0,,,,SPD,0,0,0,60,300,,,,,,FKS,1,1,3,0,0,,WLT
,1,,,,,,GLM,0,,,,PIN,1,,0,,,DIS,1,0,5,,,,DOG,0,60,30,0200,,1,0,0,60,60,,NTS,0,
30,10,,,,10,,OWH,0,1f,0900,1200,1300,1800,,0,,,,MON,0,,20,,,,TEM,0,0,0,60,300,,,,201
30123034509,02AE$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z', '0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
BSI	3	BSI	BSI
APN	<=40		
APN user name	<=30		
APN password	<=30		
Reserved	0		
SRI	3	SRI	SRI
Report mode	1	0 – 5	
Reserved	0		
Buffer enable	1	0 1	
Main server IP/domain name	<=60		
Main server port	<=5	0 – 65535	
Backup server IP	<=15		
Backup server port	<=5	0 – 65535	
SMS gateway	<=20		
Heartbeat interval	<=3	0 10 – 360min	
SACK enable	1	0 1	
Reserved	0		
Reserved	0		
Reserved	0		
CFG	3	CFG	CFG
New password	4 – 6	'0' – '9', 'a' – 'z', 'A' – 'Z'	
Device name	20		

- +RESP:GTALL: The report for real time operation READ

GL300 @Tracker Air Interface Protocol

ODO enable	1	0 1	
ODO mileage	<=9	0.0 – 4294967.0Km	
GPS on need	1	0 1 2 3	
GPS fix delay	3	5 – 60sec	
Report items mask	<=4	0000 – FFFF	
Gsm report	1	0 1 2 3	
Reserved	0		
Event mask	4	0000-FFFF	
EPB mode	1	0 1	
LED on	1	0 1 2	
Info report enable	1	0 1	
Info report interval	<=5	30 – 86400sec	
Location by call	1	0 1	
Expiry enable	1	0 1	
Expiry time	14	YYYYMMDDHHMMSS	
Agps mode	1	0 1	
Sleep enable	1	0 1	0
Reserved	0		
NMD	3	NMD	NMD
mode	1	0-F	
Non-movement duration	<=3	1 – 255(×15sec)	
Movement duration	<=2	1 – 50(×100ms)	
Movement threshold	1	2 – 9	
rest fix interval	5	5 – 86400sec	
rest send interval	5	5 – 86400sec	
pm rest threshold	1	2 – 9	
pm motion threshold	1	2 – 9	
Reserved	0		
TMZ	3	TMZ	TMZ
Time Zone	5	- +HHMM	
Daylight Saving	1	0 1	
FRI	3	FRI	FRI
Mode	1	0 1 2 3 4 5	
Discard no fix	1	0 1	
Reserved	0		
Reserved	0		
Begin time	4	HHMM	

GL300 @Tracker Air Interface Protocol

End time	4	HHMM	
Check interval	<=5	5 – 86400sec	
Send interval	<=5	5 – 86400sec	
Ignition Check interval	<=5	5 – 86400sec	
Ignition Send interval	<=5	5 – 86400sec	
Report mask	<=4	0000 – FFFF	
Distance	<=5	50 – 65535m	
Mileage	<=5	50 – 65535m	
movement detect mode	1	0 1	
movement speed	<=3	1-999(km/h)	
movement distance	<=4	1-9999(m)	
movement send number	1	1-5	
corner	3	0 - 180	
Reserved	0		
GEO	3	GEO	GEO
GEO ID0	1	0	0
Mode	1	0 – 3	
Longitude	<=11	±xxx.xxxxxxx	
Latitude	<=10	±xx.xxxxxxx	
Radius	<=7	50 – 6000000m	
Check interval	<=5	0 30 – 86400sec	
State mode	1	0 1	0
Reserved	0		
GEO ID1	1	1	1
Mode	1	0 – 3	
Longitude	<=11	±xxx.xxxxxxx	
Latitude	<=10	±xx.xxxxxxx	
Radius	<=7	50 – 6000000m	
Check interval	<=5	0 30 – 86400sec	
State mode	1	0 1	0
Reserved	0		

GL300 @Tracker Air Interface Protocol

Reserved	0		
Reserved	0		
GEO ID2	1	2	2
Mode	1	0 – 3	
Longitude	<=11	±xxx.xxxxxx	
Latitude	<=10	±xx.xxxxxx	
Radius	<=7	50 – 6000000m	
Check interval	<=5	0 30 – 86400sec	
State mode	1	0 1	0
Reserved	0		
GEO ID3	1	3	3
Mode	1	0 – 3	
Longitude	<=11	±xxx.xxxxxx	
Latitude	<=10	±xx.xxxxxx	
Radius	<=7	50 – 6000000m	
Check interval	<=5	0 30 – 86400sec	
State mode	1	0 1	0
Reserved	0		
GEO ID4	1	4	4
Mode	1	0 – 3	
Longitude	<=11	±xxx.xxxxxx	
Latitude	<=10	±xx.xxxxxx	
Radius	<=7	50 – 6000000m	
Check interval	<=5	0 30 – 86400sec	
State mode	1	0 1	0
Reserved	0		

GL300 @Tracker Air Interface Protocol

Reserved	0		
Reserved	0		
SPD	3	SPD	SPD
Mode	1	0 1 2	
Min speed	<=3	0 – 400km/h	
Max speed	<=3	0 – 400km/h	
Duration	<=4	15 – 3600sec	
Send interval	<=4	30 – 3600sec	
Reserved	0		
FKS	3	FKS	FKS
Power key enable	1	0 1	
Reserved	1		
Function key mode	1	0 1 2 3	
Reserved	0		
WLT	3	WLT	WLT
call filter	1	0 1 2	
white number	20		

GL300 @Tracker Air Interface Protocol

white number	20		
Reserved	0		
GLM	3	GLM	GLM
google mode	1	0 1 2	
direct number	20		
direct number	20		
direct number	20		
Reserved	0		
PIN	3	PIN	PIN
auto unlock PIN	1	0 1	1
PIN	4-8	'0'-'9'	
PIN checking	1	0 1	
Reserved	0		
DIS	3	DIS	DIS
Input ID	1	1	1
Enable	1	0 1	
Debounce time	<=2	1-20 ($\times 10\text{ms}$)	
Reserved	0		
DOG	3	DOG	DOG
Mode	1	0 1 2	
Ignition Frequency	<=3	10-120	

GL300 @Tracker Air Interface Protocol

Interval	<=2	1-30 days	
Time	4	HHMM	
Reserved	0		
Report Before Reboot	1	0 1	
Input ID	1	0 1	
Unit	1	0 1	0
Gsm interval	4	5-1440	60
Pdp interval	4	5-1440	60
Reserved	0		
NTS	3	NTS	NTS
enable	1	0 1	0
Rssi threshold	3	0 – 35	30
Interval	3	0 – 300min	10
Oper1	10		
Oper2	10		
Oper3	10		
Gsm interval	3	0 – 300min	10
Reserved	0		
OWH	3	OWH	OWH
Mode	1	0 1 2 3	0
Day of Work	<=2	0 – 7F	1F
Working Hours Start1	4	HHMM	0900
Working Hours End1	4	HHMM	1200
Working Hours Start2	4	HHMM	1300
Working Hours End2	4	HHMM	1800
Reserved	0		
Reserved	0		
Digital Input ID	1	0 1	0
Reserved	0		
MON	3	MON	MON
Mode	1	0–3	0
Stealthy Phone Number	<=20		
Stealthy Microphone	2	0 – 10	20
Reserved	0		

GL300 @Tracker Air Interface Protocol

Reserved	0		
Reserved	0		
Reserved	0		
TEM	3	TEM	TEM
mode	1	0 1 2 3	0
Min temperature	<=3	- 20□ - 60□	0
Max temperature	<=3	- 20□ - 60□	0
Duration	<=4	0 – 3600sec	60
Send interval	<=4	0 5 – 3600sec	300
Reserved	0		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ No matter what report mode is set, +RESP:GTALL is only reported through GPRS. If the current report mode is forcing on SMS, +RESP:GTALL will be reported via TCP short connection.

- +RESP:GTCID: The report for real time operation CID

Example:

```
+RESP:GTCID,1A0100,135790246811220,,898600810906F8048812,20100214093254,11F0
$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
ICCID	20		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- +RESP:GTCSQ: The report for real time operation CSQ

Example:

```
+RESP:GTCSQ,1A0100,135790246811220,,16,0,20100214093254,11F0$
```

Parameter	Length (byte)	Range/Format	Default
-----------	---------------	--------------	---------

GL300 @Tracker Air Interface Protocol

Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
CSQ RSSI	<=2	0 – 31 99	
CSQ BER	<=2	0 – 7 99	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTVER: The report for real time operation VER

Example:

+RESP:GTVER,1A0100,135790246811220,,GL300,0100,0101,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Device type	10	‘0’ – ‘9’, ‘a’ – ‘z’, ‘A’ – ‘Z’	GL300
Firmware version	4	0000 – FFFF	
Hardware version	4	0000 – FFFF	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ <Device type>: A string represents the type of the device.
- ❖ <Firmware version>: The firmware version. The first two characters point out the main version and the last two characters point out the subsidiary version. For example: 010A means the version 1.10
- ❖ <Hardware version>: The hardware version. The first two characters point out the main version and the last two characters point out the subsidiary version. For example: 010A means the version 1.10

➤ +RESP:GTBAT: The report for real time operation BAT

Example:

+RESP:GTBAT,1A0100,135790246811220,,0,,,4.10,0,1,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		

GL300 @Tracker Air Interface Protocol

External power supply	1	0 1	
Reserved	0		
battery percentage	3	0-100	
Battery voltage	<=4	0.0 – 4.50V	
Charging	1	0 1	
LED on	1	0 1 2	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTTMZ: The report for real time operation TMZ

Example:			
+RESP:GTTMZ,1A0100,135790246811220,-0330,0,20100214093254,11F0\$			
Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Time zone offset	5	± HHMM	
Daylight saving	1	0 1	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTALS: The report for real time operation READ,for example DIS

Example:			
+RESP:GTALS,1A0100,135790246811220,GL300,DIS,1,1,5,20121119083156,10FB\$			
Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
DIS	3	DIS	DIS
Input ID	1	1	1
Mode	1	0 1 2 3	0
Debounce time	<=2	0-20 (×10ms)	5
reserved	0		
reserved	0		
reserved	0		

GL300 @Tracker Air Interface Protocol

reserved	0		
reserved	0		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTGSV: The report for GPS level

Example:

+RESP:GTGSV,020107,359464036001111,,3,17,11,30,24,31,30,32,28,32,29,12,0,14,17,16,18
,20,0,22,24,24,0,25,0,20120305101643,000F\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
GPS level	1	0 1 2 3	
Jamming indicator	1	0-255	
SV count	2	0-12	
Sv_id	2	0-50	
Sv_power	2	0-55	
Sv_id	2	0-50	
Sv_power	2	0-55	
.....			
Sv_id	2	0-50	
Sv_power	2	0-55	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

❖ <GPS level>:Four levels:

- 0: Can not fix
- 1: Hard to fix
- 2: A little hard fix
- 3: Easy to fix

❖ <Jamming indicator>: Scaled (0 = no CW jamming, 255=strong CW jamming)

❖ <SV count>: Count of satellites the GPS found.

❖ <Sv id>: Satellite id

❖ <SV power>: Satellite power

4.3.4. Event Report

The following event reports are triggered when certain event occurs.

GL300 @Tracker Air Interface Protocol

+RESP:GTPNA: Power on report

+RESP:GTPFA: Power off report

+RESP:GTEPN: The report for connecting external power supply

+RESP:GTEPF: The report for disconnecting external power supply

+RESP:GTBPL: Battery low report

+RESP:GBTTC: Start charging report

+RESP:GTSTC: Stop charging report.

+RESP:GTSTT: Device motion state indication

+RESP:GTPDP: GPRS PDP connection report

+RESP:GTSWG: Switch on or off Geo-Fence 0 via function key

+RESP:GTIGN: Ignition on report

+RESP:GTIGF: Ignition off report

+RESP:GTGSM: The report for the information of the service cell and the neighbor cells.

+RESP:GTTEM: Temperature alarm report

In +RESP:GTEPN, +RESP:GTEPF, +RESP:GBTTC, +RESP:GTSTC, +RESP:GTBPL, +RESP:GTSTT, +RESP:GTSWG event reports, the last known GPS information and the current GSM network information are involved.

➤ +RESP:GTPNA:

Example:

+RESP:GTPNA,1A0100,135790246811220,,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTPFA:

Example:

+RESP:GTPFA,1A0100,135790246811220,,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTEPN:

Example:

```
+RESP:GTEPN,1A0100,135790246811220,,0,4.3,92,70.0,121.354335,31.222073,200902140
13254,0460,0000,18d8,6141,00,20100214093254,11F0$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ <Last longitude>: The longitude of the last position. The format is “(-)xxx.xxxxxx” and the value range is from “-180.000000” to “180.000000”. The unit is degree. West longitude is defined as negative starting with minus “-” and east longitude is defined as positive without “+”.
- ❖ <Last latitude>: The latitude of the last position. The format is “(-)xx.xxxxxx” and the value range is from “-90.000000” to “90.000000”. The unit is degree. South Latitude is defined as negative starting with minus “-” and north Latitude is defined as positive without “+”.

➤ +RESP:GTEPF:

Example:

```
+RESP:GTEPF,1A0100,135790246811220,0,,4.3,92,70.0,121.354335,31.222073,200902140
13254,0460,0000,18d8,6141,00,20100214093254,11F0$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	

GL300 @Tracker Air Interface Protocol

Device name	20		
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTBPL:

Example:

+RESP:GTBPL,1A0100,135790246811220,,3.53,0,4.3,92,70.0,121.354335,31.222073,20090
214013254,0460,0000,18d8,6141,00,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Battery voltage	<=4	0.0 – 4.50V	
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	

GL300 @Tracker Air Interface Protocol

Tail character	1	\$	\$
----------------	---	----	----

➤ +RESP:GTBTC:

Example:

+RESP:GTBTC,1A0100,135790246811220,,0,4.3,92,70.0,121.354335,31.222073,200902140
13254,0460,0000,18d8,6141,00,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTSTC:

Example:

+RESP:GTSTC,1A0100,135790246811220,,0,4.3,92,70.0,121.354335,31.222073,200902140
13254,0460,0000,18d8,6141,00,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Reserved	0		
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	

GL300 @Tracker Air Interface Protocol

Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTSTT:

Example:

+RESP:GTSTT,1A0100,135790246811220,,41,0,4.3,92,70.0,121.354335,31.222073,2009021
4013254,0460,0000,18d8,6141,00,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
State	2	21 22 41 42	
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTPDP:

Example:**+RESP:GTPDP,1A0100,135790246811220,,20100214093254,11F0\$**

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

➤ +RESP:GTSWG:**Example:****+RESP:GTSWG,1A0100,135790246811220,,1,0,2,1,0,27,1,121.390717,31.164424,20100901
073917,0460,0000,1878,0873,00,20100901154653,0015\$**

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Geo active	1	0 1	
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

❖ <*Geo active*>: A numeric to indicate to activate or deactivate Geo-Fence 0 by the long press of the function key.

0: deactivate Geo-Fence 0

1: activate Geo-Fence 0

GL300 @Tracker Air Interface Protocol

➤ +RESP:GTIGN:

Example:

```
+RESP:GTIGN,1A0100,135790246811220,,1200,0,4.3,92,70.0,121.354335,31.222073,20090
214013254,0460,0000,18d8,6141,00,20090214093254,11F0$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Duration of Ignition Off	<=6	0 – 999999 sec	
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

✧ <Duration of Ignition Off>: Duration since last time the ignition is off. If greater than 999999 seconds, report as 999999 seconds.

➤ +RESP:GTIGF:

Example:

```
+RESP:GTIGF,1A0100,135790246811220,,1200,0,4.3,92,70.0,121.354335,31.222073,20090
214013254,0460,0000,18d8,6141,00,20090214093254,11F0$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
Unique ID	15	IMEI	
Device name	20		
Duration of Ignition On	<=6	0 – 999999 sec	

GL300 @Tracker Air Interface Protocol

GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ <Duration of Ignition On>: Duration since last time the ignition is on. If greater than 999999 seconds, report as 999999 seconds.

➤ +RESP:GTGSM

Example:

```
+RESP:GTGSM,020103,011874000103767,FRI,0460,0000,1878,0871,20,,0460,0000,1878,0
152,16,,,,,,,,,,0460,0000,1878,0873,57,00,20100712071540,0008$
```

Parameter	Length(byte)	Range	Default
protocol version	6	XX0000 – XXFFFF, X ∈ {'A'-'Z', '0'-'9'}	
unique id	15	IMEI	
fix type	3	SOS RTL LBC FRI GSM	
mcc1	4	0XXX	
mnc1	4	0XXX	
lac1	4		
cellid1	4		
rxlevel1	2	0-63	
reserved1	0		
mcc2	4	0XXX	
mnc2	4	0XXX	
lac2	4		
cellid2	4		
rxlevel2	2	0-63	
reserved2	0		
mcc3	4	0XXX	
mnc3	4	0XXX	

GL300 @Tracker Air Interface Protocol

lac3	4		
cellid3	4		
rxlevel3	2	0-63	
reserved3	0		
mcc4	4	0XXX	
mnc4	4	0XXX	
lac4	4		
cellid4	4		
rxlevel4	2	0-63	
reserved4	0		
mcc5	4	0XXX	
mnc5	4	0XXX	
lac5	4		
cellid5	4		
rxlevel5	2	0-63	
reserved5	0		
mcc6	4	0XXX	
mnc6	4	0XXX	
lac6	4		
cellid6	4		
rxlevel6	2	0-63	
reserved6	0		
mcc	4	0XXX	
mnc	4	0XXX	
lac	4		
cellid	4		
rxlevel	2	0-63	
ta	2		
send time	14	YYYYMMDDHHMMSS	
count num	4		
Tail character	1	\$	\$

- ◊ <fix type> : A string to indicate what kind of GPS fixing this cell information is for.
 - "SOS" This cell information is for SOS requirement.
 - "RTL" This cell information is for RTL requirement.
 - "LBC" This cell information is for LBC requirement.
 - "FRI" This cell information is for FRI requirement.
- ◊ <mcci> : MCC of the neighbor cell *i* (*i* is the index of the neighbor cell).
- ◊ <mnci> : MNC of the neighbor cell *i*.
- ◊ <laci> : LAC in hex format of the neighbor cell *i*.
- ◊ <cellidi> : Cell ID in hex format of the neighbor cell *i*.
- ◊ <rxleveli> : The signal strength of the neighbor cell *i*. This parameter is a 6-bit coded in 1 dB steps:
 - 0: -110 dBm

GL300 @Tracker Air Interface Protocol

1 to 62: -109 to -48 dBm

63: -47 dBm

- ✧ <reserved_i> : The reserved filed for the neighbor cell *i*.
- ✧ <mcc> : MCC of the service cell.
- ✧ <mnc> : MNC of the service cell.
- ✧ <lac> : LAC in hex format of the service cell.
- ✧ <cellid> : Cell ID in hex format of the service cell.
- ✧ <rxlevel> : The signal strength of the service cell.

Note:

1. It probably includes only several neighbor cells' (even no neighbor cell) information. If some neighbor cell wasn't find, all the fields of the neighbor cell will be empty.
2. "ffff" in the field of <lac(i)>, <cellid(i)> means the terminal doesn't know the value.
3. This message can not be sent via SMS.

➤ +RESP:GTTEM

Example:

```
+RESP:GTTEM,1A0100,860599000000448,,3,33,0,5,8,0,33.4,117.201191,31.832502,201301
09061410,0460,0000,5678,2079,,20130109061517,0091$
```

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Unique ID	15	IMEI	
Device name	20		
Alarm type	1	1 2 3	
Temperature	4	XX.X	
GPS accuracy	1	0	
Speed	<=5	0.0 – 999.9km/h	
Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Last longitude	<=11	± XXX.XXXXXXX	
Last latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Odo mileage	9	0.0 – 4294967.0Km	
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	

- ✧ <Last longitude>: The longitude of the last position. The format is “(-)xxx.xxxxxx” and the

GL300 @Tracker Air Interface Protocol

- value range is from “-180.000000” to “180.000000”. The unit is degree. West longitude is defined as negative starting with minus “-” and east longitude is defined as positive without “+”.
- ✧ <Last latitude>: The latitude of the last position. The format is “(-)xx.xxxxxx” and the value range is from “-90.000000” to “90.000000”. The unit is degree. South Latitude is defined as negative starting with minus “-” and north Latitude is defined as positive without “ +”.
 - ✧ <Alarm type>: The type of temperature alarm.
 - 1: The current temperature lower than the low temperature threshold defined by <Min temperature>.
 - 2: The current temperature in setting temperature threshold range
 - 3: The current temperature higher than the high temperature threshold defined by <Max temperature>.
 - ✧ <Temperature>: The current temperature of the device.

➤ +RESP:GTDAT

Example:

+RESP:GTDAT,1A0100,135790246811220,GL300,config command to the CAN bus device,20121117112247,032D\$

Parameter	Length(byte)	Range	Default
protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
unique id	15	IMEI	
Device name	20		
data	4	0XXX	
send time	14	YYYYMMDDHHMMSS	
count num	4		
Tail character	1	\$	\$

- ✧ <data>: The data to be transferred when you execute the command “AT+GTDAT”,It should be printable ASCII string.

➤ +RESP:GTMON

Example:

+RESP:GTMON,1A0100,860599000000489,GL300,,3,0,1.0,0,41.6,117.201218,31.833279,20121213052518,0460,0000,5678,2D80,00,20121213052609,128C\$

Parameter	Length(byte)	Range	Default
protocol version	6	XX0000 – XXFFFF, X∈{'A'-'Z','0'-'9'}	
unique id	15	IMEI	
Device name	20		
Number	20		
Microphone volume			
fix			
Speed	<=5	0.0 – 999.9km/h	

GL300 @Tracker Air Interface Protocol

Azimuth	<=3	0 – 359	
Altitude	<=8	± XXXXX.X m	
Longitude	<=11	± XXX.XXXXXXX	
Latitude	<=10	± XX.XXXXXXX	
GPS UTC time	14	YYYYMMDDHHMMSS	
MCC	4	0XXX	
MNC	4	0XXX	
LAC	4	XXXX	
Cell ID	4	XXXX	
Ta	2	XX	00
send time	14	YYYYMMDDHHMMSS	
count num	4		
Tail character	1	\$	\$

- ✧ <Number>: This is a monitor phone number
- ✧ <Microphone volume>: the microphone of the terminal

4.3.5. Buffer Report

If BUFFER function is enabled, the terminal will save the message into the BUFFER in the following circumstances.

- ✧ No GSM signal.
- ✧ Failed to activate GPRS context for the TCP or UDP connection.
- ✧ Failed to establish the TCP connection with the backend server.

These messages will be sent to the backend server after the message can be sent to the backend server. The buffer reports are saved to the built-in non-volatile memory in case the device is reset. The device can save 3000 messages at most.

- ✧ Only +RESP messages can be buffered except +RESP:GTALL
- ✧ In the buffer report, the original header string “+RESP” is replaced by “+BUFF” while keeps the other content untouched including the original sending time and count number.
- ✧ Buffered messages will be sent only via GPRS by TCP or UDP protocol. They cannot be sent via SMS.
- ✧ The buffered messages will be sent after the other normal messages sending if <Buffer Mode> in AT+GTSRI is set to 1.
- ✧ The buffered messages will be sent before the other normal messages sending if <Buffer Mode> in AT+GTSRI is set to 2. The SOS message has the highest priority and is sent before the buffered messages.

Example:

The following is an example of the buffered message:

```
+BUFF:GTFRI,1A0100,135790246811220,,0,0,1,1,4,3,92,70,0,121,354335,31,222073,20090214093254,11F0$013254,0460,0000,18d8,6141,00,,20090214093254,11F0$
```

4.3.6. Report Google Maps hyperlink

According to the setting of the command **AT+GTGLM** and the configuration of location by call, the device can send a SMS with Google Maps hyperlink to a mobile phone.

If location by call is set to 1, GL300 will sent its current position to the incoming call via SMS with Google Maps hyperlink if the incoming call is a direct number (Please refer to <direct number list> in the chapter 3.2.13) or a white call (Please refer to <white number list> in the chapter 3.2.12).

If the <google link mode> was set as 1 in the command **AT+GTGLM**, GL300 will send a SMS with Google Maps hyperlink to the direct phone numbers after the message **+RESP:GTSOS** and **+RESP:GTGEO**.

➤ Google Maps hyperlink

Example:

GL300 SOS:

http://maps.google.com/maps?q=31.222073,121.354335%28GL100%29

F1 D2009/01/01T00:00:00 B74%

Parameter	Length(byte)	Range/Format	Default
Sms header	<=30		
Google Maps hyperlink	<=77		
GPS fix	2	F1 F0	
GPS UTC time	20	YYYY/MM/DDHH :MM:SS	
battery level	<=5	B1-100%	

- ❖ <Sms header>: A string that includes the terminal name and GPS fix type ("SOS", "IN GEO-i", "OUT GEO-i", "LBC").
- ❖ <Google Maps hyperlink>: A string of a google map hyperlink.

4.4. Heartbeat

Heartbeat is used to maintain the contact between the device and the backend server if communicating via GPRS. The heartbeat package is sent to the backend server at the interval defined by <Heartbeat interval> in **AT+GTQSS** or **AT+GTSRI** command.

➤ +ACK:GTHBD:

Example:

+ACK:GTHBD,1A0100,135790246811220,,20100214093254,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X∈{‘A’-‘Z’,‘0’-‘9’}	
Unique ID	15	IMEI	

GL300 @Tracker Air Interface Protocol

Device name	20		
Send time	14	YYYYMMDDHHMMSS	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

Whenever the backend server receives a heartbeat package, it should reply an acknowledgement to the device.

➤ +SACK:GTHBD:

Example:

+SACK:GTHBD,1A0100,11F0\$

Parameter	Length (byte)	Range/Format	Default
Protocol version	6	XX0000 – XXFFFF, X ∈ {‘A’-‘Z’, ‘0’-‘9’}	
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ <Count number>: The backend server uses the <Count number> extracted from the heartbeat package from the device as the <Count number> in the server acknowledgement of the heartbeat.

4.5. Sever Acknowledgement

If server acknowledgement is enabled by AT+GTQSS or AT+GTSRI command, the backend server should reply to the device whenever it receives a message from the device.

➤ +SACK:

Example:

+SACK:11F0\$

Parameter	Length (byte)	Range/Format	Default
Count number	4	0000 – FFFF	
Tail character	1	\$	\$

- ❖ <Count number>: The backend server uses the <Count number> extracted from the received message as the <Count number> in the server acknowledgement.

Appendix: Message Index

◊ Command and ACK

AT+GTQSS

+ACK:GTQSS

AT+GTBSI

+ACK:GTBSI

AT+GTSRI

+ACK:GTSRI

AT+GTCFG

+ACK:GTCFG

AT+GTNMD

+ACK:GTNMD

AT+GTTMA

+ACK:GTTMA

AT+GTFRI

+ACK:GTFRI

AT+GTGEO

+ACK:GTGEO

AT+GTSPD

+ACK:GTSPD

AT+GTFKS

+ACK:GTFKS

AT+GTRTO

+ACK:GTRTO

AT+GTWLT

+ACK:GTWLT

AT+GTGLM

+ACK:GTGLM

AT+GTPIN

+ACK:GTPIN

AT+GTDIS

+ACK:GTDIS

AT+GTDOG

+ACK:GTDOG

AT+GTDAT

+ACK:GTDAT

AT+GTNTS

+ACK:GTNTS

AT+GTOWH

+ACK:GTOWH

AT+GTMON

+ACK:GTMON

AT+GTTEM
+ACK:GTTEM

◊ **Position Related Report**

+RESP:GTFRI
+RESP:GTGEO
+RESP:GTSPD
+RESP:GTSOS
+RESP:GTRTL
+RESP:GTLBC
+RESP:GTPNL
+RESP:GTNMR
+RESP:GTGCR
+RESP:GTDOG
+RESP:GTIGL

◊ **Device Information Report**

+RESP:GTINF

◊ **Report for Querying**

+RESP:GTGPS
+RESP:GTALL
+RESP:GTCID
+RESP:GTCSQ
+RESP:GTVER
+RESP:GTBAT
+RESP:GTTMZ
+RESP:GTALS

◊ **Event Report**

+RESP:GTPNA
+RESP:GTPFA
+RESP:GTEPN
+RESP:GTEPF
+RESP:GTBTC
+RESP:GTSTC
+RESP:GTBPL
+RESP:GTSTT
+RESP:GTPDP
+RESP:GTSWG
+RESP:GTIGN
+RESP:GTIGF
+RESP:GTGSM
+RESP:GTTEM

GL300 @Tracker Air Interface Protocol

✧ **Executive command Report**

+RESP:GTDAT

+RESP:GTMON

✧ **Heartbeat**

+ACK:GTHBD

+SACK:GTHBD

✧ **Server Acknowledgement**

+SACK